



AP<sup>™</sup> Bearings for Industrial Applications

# **INDEX**

INTRODUCTION

Development and Advantages7
Bearing Reconditioning7
Description of Parts
Basic Bearing Assembly Dimensions and Ratings9
Overall Dimensions

- 1	
• .	

A

#### HOW TO IDENTIFY ASSEMBLY NUMBERS AND PART NUMBERS

Bearing Assembly Numbers	13
Standard Part Numbers	14

# C

#### **MOUNTING DESIGNS**

Typical Applications	
Crane Bridge and Trolley Axles	18-19
Moveable Stadium Roof	
Table Rolls	
Continuous Casting Machine Guide Rollers	
Elevator Sheaves.	23
Ingot Cars	24-25
Sintering Car Wheels	
Coal Crushers	
Wood Pulp Beater Spindles	
Furnace Wheels.	



#### **TECHNICAL SUPPORT**

Shaft/Axle Details	
Full Bore Housing Dimensions	
Adapters and Mounting Designs	33-34
Auxiliary Parts Detail Dimensions	35-37
Seal Wear Ring	
Seal Case	
Backing Spacer	
Axle End Cap	
Recessed End Cap	
Backing Rings	
Bearing Fitting Practice	
Press Fit Force Requirements	
Shaft Stress Calculation	
Bearing Life Equations	
Assembly and Disassembly	41-47
Lubrication	



#### HOW TO ORDER

AP™ Bearing Ordering Procedure	51-52
Basic AP Bearing Assembly Numbers - Method 1	53-54
Supplemental and Special Assembly Numbers - Method 2. $\ldots$	55-81



# INTRODUCTION

Development and Advantages	
Bearing Reconditioning	
Description of Parts	8
Basic Bearing Assembly Dimensi	ons and Ratings9
Overall Dimensions	



# **INTRODUCTION**

When Timken introduced its revolutionary AP<sup>™</sup> (All-Purpose) railroad bearings in 1954, it was a railroad industry milestone. Decades later, Timken is a leader in the friction management and power transmission industries and continues to lead in advancing bearing technology through continuous innovation and development.

In addition to railroad applications, AP bearings are successfully used in many types of industrial applications. This can be attributed to many factors including the bearing's high load carrying capacity and its adaptability to a wide variety of applications.

#### **ADVANTAGES OF TIMKEN AP BEARINGS**

- Self-contained unit provides substantial cost savings in design and installation. Many mounting parts are available with the bearing assembly.
- Pregreased unit reduces installation costs.
- Preassembled bearing reduces the number of separate parts to be applied and helps reduce the chance of incorrect assembly.

- High quality, tested and improved radial lip seals provide exceptional protection, minimum relubrication and low maintenance.
- Positive alignment of rollers is maintained in the bearing due to its basic tapered roller construction. This distributes the load over the entire roller length and helps to prevent rollers from skewing.
- On-apex design provides true rolling motion with less friction and more resistance to wear.
- Case-hardened and hardened cones, cups and rollers put hardness where it is needed at the working surfaces. The core of these parts, being more ductile, resists the propagation of fatigue cracks and spalls.
- AP bearings are adaptable to a wide range of applications in new designs and changeovers from other bearing types. AP bearings range in bore size from 101.6 to 203.2 mm (4 to 8 inches). Optional auxiliary parts can be added to suit a wide range of mounting configurations.

#### **BEARING RECONDITIONING**


Rail Bearing Service Corporation, a wholly owned subsidiary of Timken, reconditions bearings and related parts used in railroad rolling stock and industrial equipment. To learn more about repair for AP bearings, contact your Timken representative.

# TIMKEN® AP BEARING ASSEMBLY DESCRIPTION OF PARTS


- The narrow adapter shown in Fig. 1 can be used in many applications. Another type of mounting utilizes a full bore housing (see page 21). While this type of housing is currently unavailable through Timken, most bearing distributors provide a selection from other manufactuerers.
  - The bearing assembly is pressed on the axle as a completely sealed unit. The axle end cap, cap screws and locking plate

can be applied to the axle as a unit. When the axle end cap, as shown in Fig. 1 is used, the locking plate provided locks the cap screws.

 The recessed end cap, not shown, reduces the overall bearing assembly width. A piece of soft wire is required to lock the drilled cap screw heads. A backing spacer can be used in place of a backing ring.

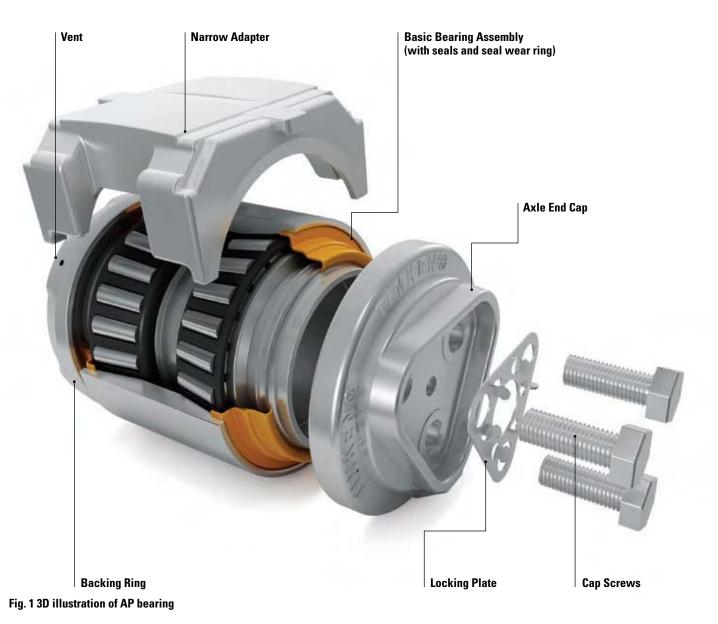

#### INTRODUCTION

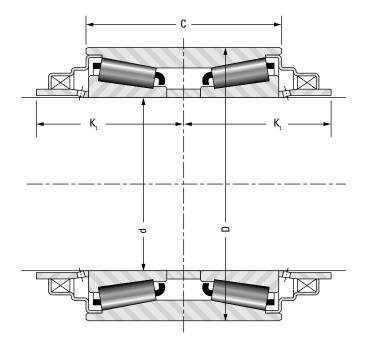

#### **Basic Bearing Assembly Dimensions and Ratings**

Class Inner Race (Cone) Number		d <sup>(1)</sup> Bore	D <sup>(2)</sup> Outside Diameter	К <sub>t</sub>	C Outer Race Width	Dyn	amic Rating @ 500 F For 3000 hr L <sub>10</sub>	PM
Class	Class Outer Race (Cup) Number	mm in.	mm in.	mm in.	<b>mm</b> in.	Radial, C <sub>90</sub> <b>N</b> Ibf	Thrust, C <sub>a90</sub> N Ibf	K Factor <sup>(4)</sup>
B (4 ¹⊠x 8)	HM120848 HM120817XD	<b>101.600</b> 4.0000	<b>165.100</b> 6.5000	<b>91.3</b> 3.59	<b>114.300</b> 4.5000	<b>120000</b> 26900	<b>31000</b> 7000	2.21
C (5 x 9)	HM124646 HM124618XD	<b>119.062</b> 4.6875	<b>195.262</b> 7.6875	<b>108.7</b> 4.28	<b>142.875</b> 5.6250	<b>172000</b> 38600	<b>44500</b> 10000	2.21
D (5 '⊠x 10)	HM127446 HM127415XD	<b>131.750</b> 5.1870	<b>207.962</b> 8.1875	<b>113.5</b> 4.47	<b>152.400</b> 6.0000	<b>186000</b> 41800	<b>48500</b> 10900	2.21
E (6 x 11)	HM129848 HM129814XD	<b>144.450</b> 5.6870	<b>220.662</b> 8.6875	<b>120.6</b> 4.75	<b>163.512</b> 6.4375	<b>195000</b> 43800	<b>50700</b> 11400	2.21
F (6 '⊠x 12)	HM133444 HM133416XD	<b>157.150</b> 6.1870	<b>252.412</b> 9.9375	<b>136.5</b> 5.38	<b>184.150</b> 7.2500	<b>266000</b> 59700	<b>69000</b> 15500	2.21
G (7 x 12)	HM136948 HM136916XD	<b>177.787</b> 6.9995	<b>276.225</b> 10.8750	<b>134.9</b> 5.31	<b>185.725</b> 7.3120	<b>305000</b> 68600	<b>79200</b> 17800	2.21
G (7 x 14)	HM136948 HM136916XD	<b>177.787</b> 6.9995	<b>276.225</b> 10.8750	<b>134.9</b> 5.31	<b>185.725</b> 7.3120	<b>305000</b> 68600	<b>79200</b> 17800	2.21
GG (7)	H337846 H337816XD <sup>(3)</sup>	<b>177.787</b> 6.9995	<b>301.701</b> 11.8780	<b>139.7</b> 5.50	<b>196.850</b> 7.7500	<b>388000</b> 87300	<b>132110</b> 29700	1.69
K (8)	M241547 M241513XD	<b>203.200</b> 8.0000	<b>301.625</b> 11.8750	<b>108.0</b> 4.25	<b>140.097</b> 5.5156	<b>266000</b> 59700	<b>86800</b> 19500	1.76


(1) Cone bore tolerance + 0.025 – 0.000 mm (+ .0010 in. – .0000 in.)

<sup>(2)</sup> Cup 0.D. tolerance + 0.127 - 0.000 mm (+ .0050 in. - .0000 in.)

<sup>(3)</sup> Cup H337816XD O.D. tolerance is +0.127 + 0.076 mm (+ .0050 in. + .0030 in.)

<sup>(4)</sup> K Factor is defined as the tapered roller bearing radial to axial dynamic capacity ratio.

NOTE: Special cup 0.D. tolerance +0.102 + 0.076 mm (+ .0040 in. + .0030 in.) also available.

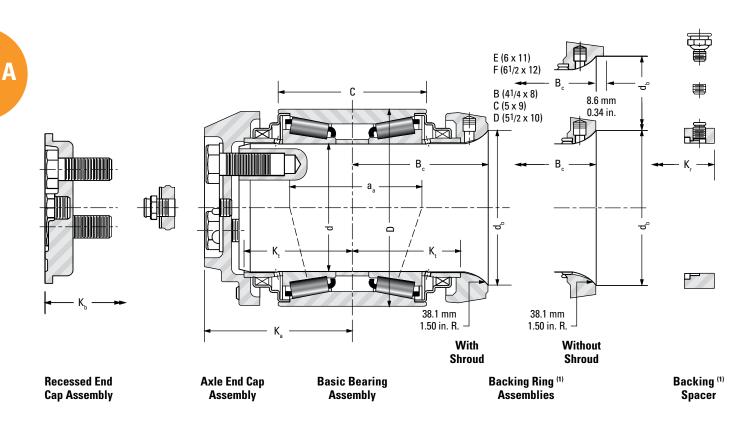

<sup>(1)</sup> Backing ring assemblies and/or backing spacer may be used on either side of the bearing.

	d Bore	D Outside	B <sub>c</sub>	К <sub>t</sub>	K <sub>a</sub> Max	K <sub>b</sub> Max	K <sub>b</sub> Max	K <sub>b</sub> Max	K <sub>b</sub> Max	K <sub>b</sub> Max	K <sub>b</sub> Max	K <sub>b</sub> Max	a K <sub>b</sub> ax Max	К <sub>г</sub>	K <sub>b</sub> K <sub>r</sub>	K <sub>b</sub> K <sub>r</sub>	C Outer Race		d <sub>b</sub> Backing Ring	
Class		Diameter						Width	With Shroud	Without Shroud	a <sub>a</sub>									
	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm									
	in.	in.	in.	in.	in.	in.	in.	in.	in.	in.	in.									
B (4 ¹⊠x 8)	<b>101.600</b>	<b>165.100</b>	<b>117.5</b>	<b>91.3</b>	<b>158.2</b> <sup>(2)</sup>	<b>99.0</b>	<b>119.9</b>	<b>114.300</b>	<b>127.0</b>	<b>127.0</b>	<b>79.8</b>									
	4.0000	6.5000	4.62	3.59	6.23	3.90	4.72	4.5000	5.00	5.00	3.14									
C (5 x 9)	<b>119.062</b>	<b>195.262</b>	<b>134.9</b>	<b>108.7</b>	<b>163.8</b> <sup>(2)</sup>	<b>116.5</b>	<b>137.3</b>	<b>142.875</b>	<b>149.2</b>	<b>149.2</b>	<b>105.7</b>									
	4.6875	7.6875	5.31	4.28	6.45	4.59	5.41	5.6250	5.88	5.88	4.16									
D (5 ¹⊠x 10)	<b>131.750</b>	<b>207.962</b>	<b>139.7</b>	<b>113.5</b>	<b>158.2</b> <sup>(2)</sup>	<b>122.9</b>	<b>142.1</b>	<b>152.400</b>	<b>161.9</b>	<b>161.9</b>	<b>116.8</b>									
	5.1870	8.1875	5.50	4.47	6.23	4.84	5.59	6.0000	6.38	6.38	4.60									
E (6 x 11)	<b>144.450</b>	<b>220.662</b>	<b>150.8</b>	<b>120.6</b>	<b>169.7</b>	<b>130.0</b>	<b>149.2</b>	<b>163.512</b>	<b>177.8</b>	<b>178.56</b>	<b>127.5</b>									
	5.6870	8.6875	5.94	4.75	6.68	5.12	5.88	6.4375	7.00	7.03	5.02									
F (6 ¹⊠x 12)	<b>157.150</b>	<b>252.412</b>	<b>163.5</b>	<b>136.5</b>	<b>181.6</b>	<b>145.9</b>	<b>165.1</b>	<b>184.150</b>	<b>190.5</b>	<b>191.26</b>	<b>143.3</b>									
	6.1870	9.9375	6.44	5.38	7.15	5.74	6.50	7.2500	7.50	7.53	5.64									
G (7 x 12)	<b>177.787</b> 6.9995	<b>276.225</b> 10.8750	<b>150.8</b> 5.94	<b>134.9</b> 5.31	<b>180.0</b> 7.09	<b>144.3</b> 5.68	<b>163.5</b> 6.44	<b>185.725</b> 7.3120	<b>203.2</b> 8.00	_	<b>144.8</b> 5.70									
G (7 x 14)	<b>177.787</b> 6.9995	<b>276.225</b> 10.8750	<b>163.5</b> 6.44	<b>134.9</b> 5.31	<b>180.0</b> 7.09	<b>144.3</b> 5.68	<b>163.5</b> 6.44	<b>185.725</b> 7.3120	<b>203.2</b> 8.00	-	<b>144.8</b> 5.70									
GG (7)	<b>177.787</b> 6.9995	<b>301.701</b> 11.8780	<b>155.6</b> 6.12	<b>139.7</b> 5.50	<b>184.8</b> 7.28	<b>149.1</b> 5.87	<b>168.3</b> 6.62	<b>196.850</b> 7.7500	<b>203.2</b> 8.00	-	<b>154.9</b> 6.10									
K (8)	<b>203.200</b> 8.0000	<b>301.625</b> 11.8750	-	<b>108.0</b> 4.25	-	<b>122.2</b> 4.81	_	<b>140.097</b> 5.5156	_	-	<b>115.8</b> 4.56									

(2) On Classes B, C, and D the lubricant fitting extends beyond the axle end cap. Dimensions given include the lubricant fitting.







## HOW TO IDENTIFY ASSEMBLY NUMBERS AND PART NUMBERS

#### HOW TO IDENTIFY ASSEMBLY NUMBERS AND PART NUMBERS

#### **BEARING ASSEMBLY NUMBERS**


In order to facilitate the identity of groups of parts, a "bearing assembly number" system is used. AP bearings are each assigned a five digit numeric code that follows the cone part number to describe the individual component parts, prelubrication, performance codes, and internal clearance of the pre-set assembly. In some cases the code may be alphanumeric, although the first digit is always "9".

For new applications, an assembly number is assigned on receipt of the first order. It is very important for the correct fitting and functioning of the bearing that the same assembly number is quoted for all subsequent replacement orders for that specific bearing position. Standard and supplemental assembly numbers are listed in this catalog starting on page 55.

Timken should be consulted if additional information is needed on any combination of parts or if questions arise about the correct assembly number for a specific application.

The assembly, HM120848 90012, shown in Fig. 2 identifies an assembly consisting of:

- 2 HM120848 cones
- 1 HM120817XD cup
- 1 HM120848XA cone spacer (fitted for normal internal clearance)
- 2 K86890 seal wear rings
- 2 K86895 seal assemblies
- 1 K86874-90010 backing ring assembly consisting of:
  - 1 K86874 backing ring
  - 1 K89716 vent fitting

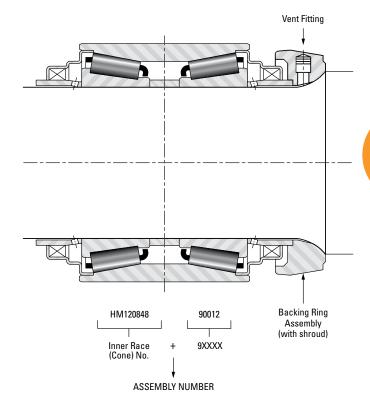


B

Fig. 2 Typical AP bearing assembly

#### **STANDARD PART NUMBERS**

#### **Standard Parts for Timken AP Bearings**


Class		Carl Assamble		Backing Ring				
Class	Inner Race (Cone)	Outer Race (Cup)	Cone Spacer	Seal Wear Ring	Seal Assembly	With Shroud	Without Shroud	Vent
B (4 1🛙 x 8)	HM120848	HM120817XD	HM120848XA	K86890	K86895	K86874	K127203	K89716
C (5 x 9)	HM124646	HM124618XD	HM124646XA	K86002	K85600	K85588	K127204	K89716
D (5 ¹⊠x 10)	HM127446	HM127415XD	HM127446XA	K85507	K86860	K85525	K127205	K89716
E (6 x 11)	HM129848	HM129814XD	HM129848XA	K85508	K86861	K85095	K127206	K89716
F (6 '⊠x 12)	HM133444	HM133416XD	HM133444XA	K85509	K85520	K85516	K125685	K89716
G (7 x 12)	HM136948	HM136916XD	HM136948XA	K147767	K96501	-	K153497	K89716
G (7 x 14)	HM136948	HM136916XD	HM136948XA	K147767	K96501	K95200	-	K89716
GG (7)	H337846	H337816XD	H337846XA	K147767	K99424	-	K153497	K89716
K (8)	M241547	M241513XD	M241547XA	K504074	K504073	-	-	-

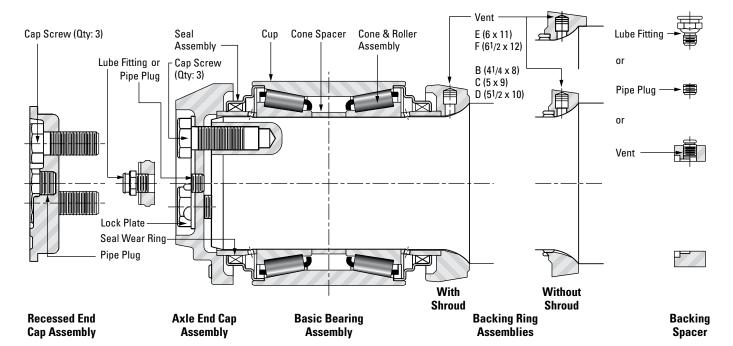

		Backing	g Spacer				Axle End Cap	I		Recessed End Cap			Adapter <sup>(1)</sup>	
Class	Backing Spacer	Vent	Pipe Plug	Lube Fitting	Axle End Cap	Lock Plate	Cap Screw	Lube Fitting	Pipe Plug	Recessed End Cap	Cap Screw	Pipe Plug	Narrow	Wide
B (4 12 x 8)	K118891	K83093	K46462	K78880	K86877	K84326	K53399	K399065	K86891	K399069	K344077	K75801	K86888	K87124
C (5 x 9)	K120198	K83093	K46462	K78880	K86003	K84325	K44434	K399065	K86891	K399070	K344077	K75801	K85581	K86019
D (5 1⊠x 10)	K120178	K83093	K46462	K78880	K85521	K80511	K44434	K49022	K75801	K399071	K33003	K75801	K85530	K85526
E (6 x 11)	K120190	K83093	K46462	K78880	K85510	K80596	K84354	K49022	K75801	K399072	K74600	K75801	K85073	K85513
F (6 ¹⊠x 12)	K120160	K83093	K46462	K78880	K85517	K84324	K84351	K49022	K75801	K399073	K74600	K75801	K85524	K85531
G (7 x 12)	K118866	K83093	K46462	K78880	K95199	K84701	K84398	K49022	K75801	K399074	K74588	K75801	K83138	-
G (7 x 14)	K118866	K83093	K46462	K78880	K412057	K84701	K84398	K49022	K75801	K399074	K74588	K75801	K83138	-
GG (7)	K118866	K83093	K46462	K78880	-	K84701	K462063	K49022	K75801	K399074	K74588	K75801	-	-
K (8)	-	-	-	-	-	-	-	-	-	K504075	K74588	K75801	K522803	-

(1) Not shown.

C

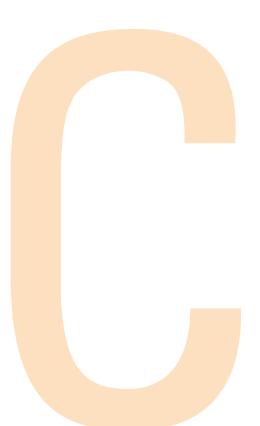

# C

# Mount Roots of States **MOUNTING DESIGNS**

21
Rollers22
23
24
27
27



Soaking Pit Covers

**Hopper Cars** 

**Triple Cables** 

**Conveyor Drums** 

C

Stackers

Axles

Table Rolls

Bar Mills

**Billet Mills** 

**Blooming Mills** 

**Furnace Feeds** 

**Merchant Mills** 

**Pipe Conveyor** 

Structural Mills

Table Roll Line Shafts

Target Transporters

**Temper Mill 2 Stands** 

**Barking Drums** 

**Copper Converters** 

Water Purification Drums

Wire Spool Support Heads

17

Rod Mills

Slab Mills

Strip Mills

Trunnion Rollers

Dryers

Scrubbers

**Turntables** 

Welding Positioners

Kilns

# **MOUNTING DESIGNS**

#### **TYPICAL APPLICATIONS**

Listed below are some of the various applications on which AP bearings are presently being used. Photographs and/or line drawings of some of these designs are shown on the following pages.

- Apron Feeders
- Auto Shredders
- Band Saws
- Barking Drums Thrust Rollers
- Billet Ejectors
- Bucket Unloaders
- Calender Rolls
- Cam Rollers
- Cars
- Billet Grinder Cars
- Cable Cars
- Cane Cars
- Charging Box Cars
- Coke Guide Cars
- Coke Quench Cars
- Coke Screening Cars
- Furnace Cars
- Furnace Heat Shield Cars
- Hot Metal Cars
- Ingot Cars
- Ingot Transfer Cars
- Ladle Transfer Cars
- Larry Cars
- Loop Cars
- Manipulator Cars
- Ore Transfer Cars
- Orienter Cars
- Scale Cars
- Scrap Charging Cars
- Sheet Piler Cars
- Shot Blast Cars
- Sintering Pallet Cars
- Skip Cars
- Slab Return Cars
- Slag Pot Cars
- Transfer Cars
- Transformer Cars
- Tundish Cars
- Weight Cars
- Work roll Changer Cars
- X-Ray Cars

- Chippers
- Choppers Land Clearing
- Clay Gun Carriages
- Coal Crushing Machines
- Breaker Shafts
- Conveyor Drums
- Eccentric Shafts
- Coal Pulverizers
- Compactor Presses
  - Backshafts
  - Flywheels
- Continuous Casters
  - Apron Guide Rollers
  - Runout Table Rolls
  - Cut Off Conveyors
- Continuous Miner Drives
  - Cutter Heads
- Trackwheel Sprockets
- Conveyors
  - Head and Tail Drums
- Cranes
  - Bridge Wheels
  - Trolley Wheels
  - Drum Supports
- Davit Anchors
- Digesters
- Docks Loaders and Unloaders
- Draglines
- Drum Hoists
- Dynamometers
- Feeders
- Film Evaporators
- Flanging Machines
- Furnaces
- Roof Swing Guides
- Walking Beam Wheels
- Rotary
- Gearless Elevators
- Grate Bar Rappers
- House Moving Dollies

- Jaw Crushers
- Laminators
- Levellers
- Line Shafts
- Line Tension Drums
- Locomotives
- Locomotive Cranes
- Log Rolls
- Missile Transporters
- Mobile Chargers
- Moveable Stadium Roofs
- Muckers
  - Paper Mill Rolls
- Paper Reelers

**Pillow Blocks** 

**Plate Benders** 

**Back Shafts** 

Fly Wheels

**Pinch Rolls** 

Presses

Press Rolls

Pulp Beaters

Saddles

**Ram Rollers** 

**Reeler Bars** 

Shears

Sheaves

**Rotary Wheels** 

Elevators

Fairleads

Hoistings

Mine Heads

Slab Extractors

**AP™ BEARINGS FOR INDUSTRIAL APPLICATIONS** 

Idlers

Ski Lifts

Rod Mill Roll Necks

Saw Mill Carriages

.

.

Pumping Units

Equalizers

**Radiation Chamber Doors** 

• Pig Casting Machines

#### **CRANE BRIDGE AND TROLLEY AXLE**

This illustrates a typical AP bearing mounting for crane bridge and trolley axle using recessed end cap. This clamped wheel design is shown on a drive axle. The idler axle design is similar except both bearings are clamped in the same manner as the left-hand assembly shown in Fig. 3.


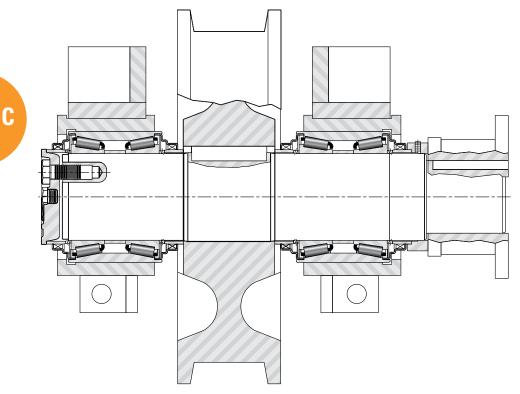


Fig. 3 Cross section of AP bearing on a drive axle

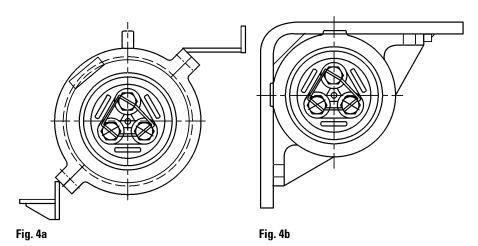

Typical full bore housing designs for crane wheel applications

#### **Crane Bridge and Trolley Axle**

The crane bridge and trolley axle photos below illustrate an example of a standard and recessed end cap.



#### Fig. 5 Standard end cap design



Fig. 6 Trolley utilizing AP bearings with recessed end cap for wheel and drum drive

## **MOUNTING DESIGNS**

#### **Moveable Stadium Roof**

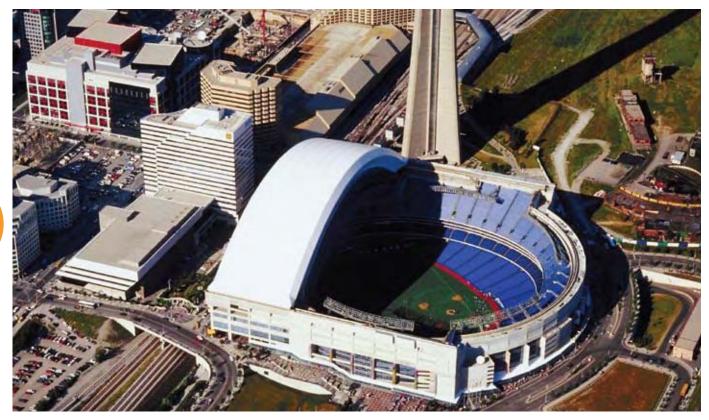


Fig. 7 The Toronto Blue Jays Stadium uses Timken bearings in the moveable stadium roof


#### **Narrow Adapter Mounting**



Fig. 8 Narrow adapter mounting on trolley safety bar

#### **TABLE ROLLS**

#### Line Shaft Drive Full Bore Housing

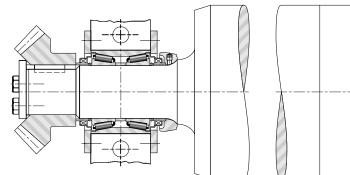

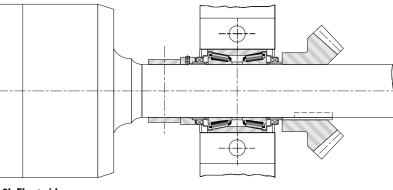


Fig. 9a Fixed side

Fig. 9b Float side

#### **Ram Roller - Adapter Mounting**



Fig. 10 A standard narrow adapter is used at both positions to ensure positive radial location of the AP bearing cups. A close clearance is provided between thrust lugs and the sides of the adapters to keep axial movement of the roll to a minimum.

#### CONTINUOUS CASTING MACHINE GUIDE ROLLERS AND RUNOUT TABLES

Used on both original and conversion guide roller applications, AP bearings provide a low maintenance, economical mounting arrangement.

Close tolerance adapters are used in the lower design. Caster AP bearings are available with or without a narrow adapter or solid housing.

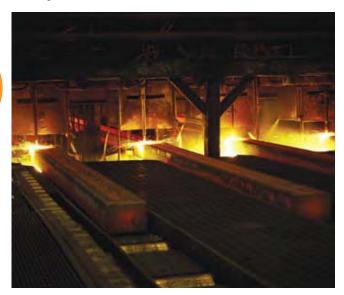


Fig. 11 AP bearing equipped runout tables

#### **PILLOW BLOCK**

Greasing systems may not be required with the prelubricated AP bearing used in certain pillow block applications. Contact your Timken service representative for more information.



Fig. 12 AP bearings used in pillow block application

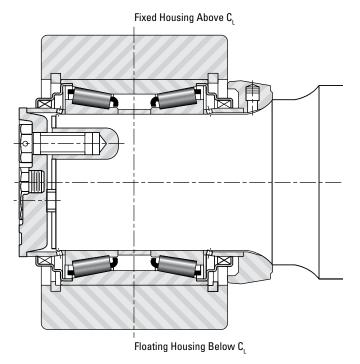


Fig. 13 Cross section of AP bearing in housing

#### MOUNTING DESIGNS

#### **ELEVATOR SHEAVE**

The cup of this AP bearing is mounted directly into the sheave hub with a tight fit. Snap rings are required because of elevator safety regulations.

No provision for relubrication is made in this application. Some builders prefer to completely fill the bearing with grease at assembly while others depend on the initial charge of grease as supplied in a new bearing. Either practice is satisfactory for this specific application.

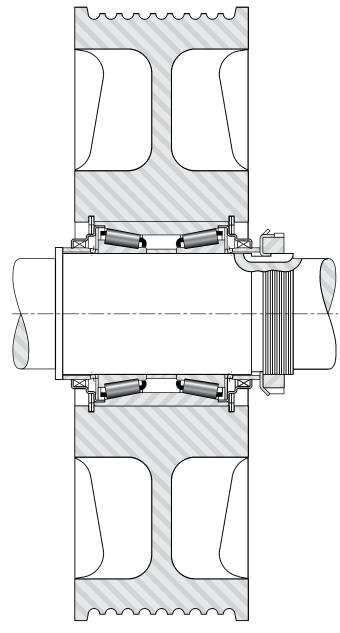


Fig. 14 Section view of elevator sheave

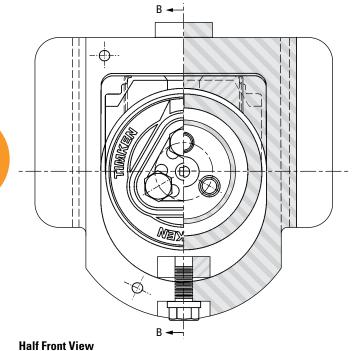


Fig. 15 AP bearings shown on typical elevator sheave application

# **MOUNTING DESIGNS**

#### **INGOT CARS**

Thousands of AP bearing-equipped ingot cars in various capacity ratings are in service in steel plants around the world.






Half Section A-A



Fig. 17 Bottom pour ingot car equipped with Timken AP bearings

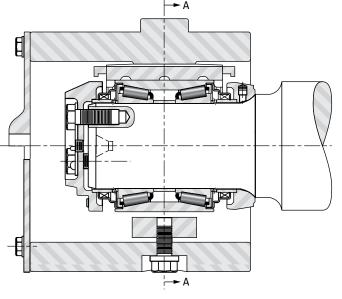

Section B-B

Fig. 16 Cross section of AP bearing in ingot car

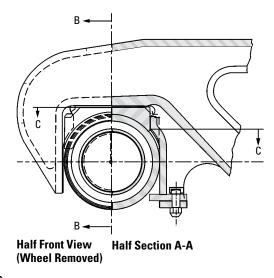


Fig. 18 Coil transfer car equipped with AP bearings on axles


#### **COIL TRANSFER CAR**

The cones in this inboard design are clamped on the shaft by the press fit of the wheel hub.

The adapter is mounted in a cast side frame and is restricted from axial movement as shown in Section C-C of Fig. 19.





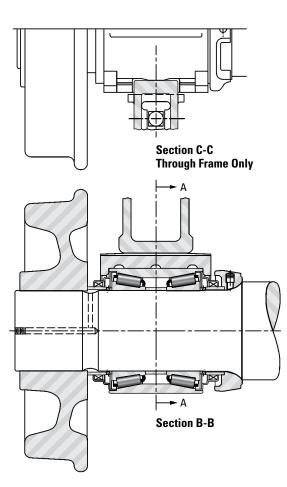

## **MOUNTING DESIGNS**

#### **SINTERING CAR WHEEL**

This application illustrates the effectiveness of the AP bearing seals in excluding the abrasive material from the bearing elements.



Fig. 20 Coke transfer car equipped with AP bearings

#### **COAL CRUSHER**

AP bearings are used on the breaker shaft as well as in the conveyor drive head and tail drums of this coal crusher (Fig. 21a and Fig. 21b).



Fig. 21a Coal crusher shaft

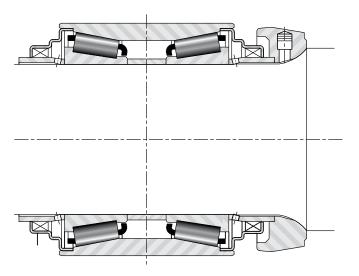
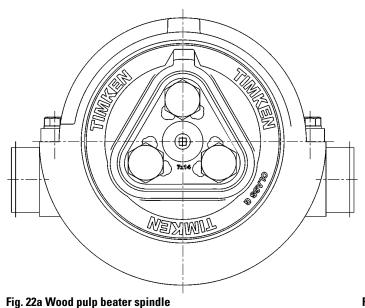


Fig. 21b Cross section of AP bearing in coal crusher

#### WOOD PULP BEATER SPINDLE

This beater spindle uses all standard parts of the AP bearing unit with exception of the special housing (Fig. 22a and Fig. 22b). A clearance can be provided between the faces of the cup and housing shoulders to provide axial ⊠oat as required. Note that this design uses a split housing.



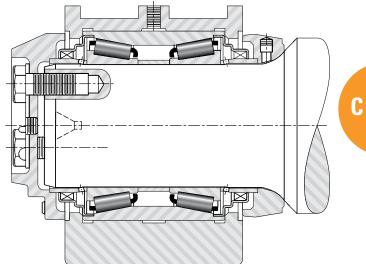


Fig. 22b Cross section of wood pulp beater spindle

#### **FURNACE WHEEL**

This design takes advantage of the "package" portion of the AP bearing-seal wear ring to seal wear ring. The use of both the adapter and backing ring is eliminated. The end cap is applied after insertion of a special spacer backing against the seal wear ring to clamp up the bearing assembly (Fig. 23).


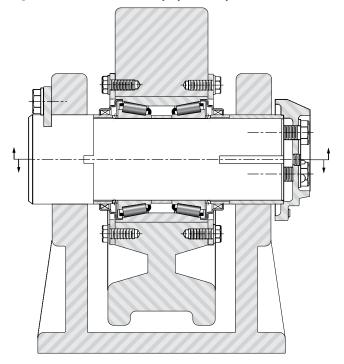


Fig. 23 Furnace wheel

MOUNTING DESIGNS	
------------------	--

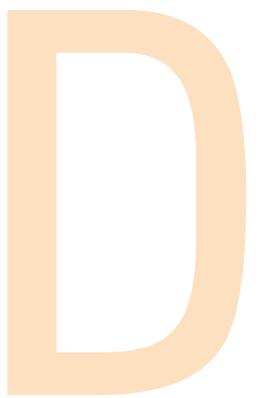

# D

# TECHNICH SUPPORT **TECHNICAL SUPPORT**

 
Full Bore Housing Dimensions
Adapters and Mounting Designs
Auxiliary Parts Detail Dimensions
Seal Wear Ring
Seal Case
Backing Spacer
Axle End Cap
Recessed End Cap
Backing Rings
Bearing Fitting Practice
Press Fit Force Requirements
Shaft Stress Calculation
Bearing Life Equations
Assembly and Disassembly41
Lubrication




### **TECHNICAL SUPPORT**

# **TECHNICAL SUPPORT**

#### SHAFT/AXLE DETAILS



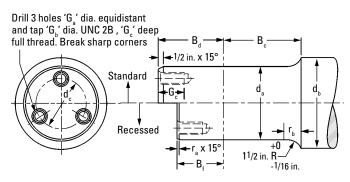


	da <sup>(1)</sup>	Backing Spacer		Backing Rings								
Class	ua <sup>(1)</sup>	B <sub>a</sub>	Bb	d <sub>b</sub> With Shroud	d <sub>b</sub> Without Shroud	B <sub>c</sub>	r <sub>b</sub>					
	mm	mm mm		<b>mm</b>	mm	mm	<b>mm</b>					
	in.	in. in.		in.	in.	in.	in.					
B (4 ¹⊠x 8)	<b>101.702-101.676</b>	<b>116.7</b>	<b>91.3</b>	<b>127.0</b>	<b>127.0</b>	<b>117.5</b>	<b>28.40</b>					
	4.0040-4.0030	4.59	3.59	5.00	5.00	4.62	1.118					
C (5 x 9)	<b>119.164-119.138</b>	<b>134.1</b>	<b>108.7</b>	<b>149.2</b>	<b>149.2</b>	<b>134.9</b>	<b>30.35</b>					
	4.6915-4.6905	5.28	4.28	5.88	5.88	5.31	1.195					
D (5 ¹⊠x 10)	<b>131.864-131.838</b>	<b>138.9</b>	<b>113.5</b>	<b>161.9</b>	<b>161.9</b>	<b>139.7</b>	<b>30.35</b>					
	5.1915-5.1905	5.47	4.47	6.38	6.38	5.50	1.195					
E (6 x 11)	<b>144.564-144.538</b>	<b>146.0</b>	<b>120.6</b>	<b>177.8</b>	<b>178.61-178.56</b>	<b>150.8</b>	<b>31.50</b>					
	5.6915-5.6905	5.75	4.75	7.00	7.032-7.030	5.94	1.240					
F (6 '⊠x 12)	<b>157.264-157.238</b>	<b>161.9</b>	<b>136.5</b>	<b>190.5</b>	<b>191.31-191.26</b>	<b>163.5</b>	<b>31.50</b>					
	6.1915-6.1905	6.38	5.38	7.50	7.532-7.530	6.44	1.240					
G (7 x 12)	<b>177.902-177.876</b> 7.0040-7.0030	<b>160.3</b> 6.31	<b>134.9</b> 5.31	_	<b>203.25-203.20</b> 8.002-8.000	<b>150.8</b> 5.94	<b>28.40</b> 1.118					
G (7 x 14)	<b>177.902-177.876</b> 7.0040-7.0030	<b>160.3</b> 6.31	<b>134.9</b> 5.31	<b>203.2</b> 8.00	_	<b>163.5</b> 6.44	<b>28.40</b> 1.118					
GG (7)	<b>177.902-177.876</b> 7.0040-7.0030	<b>165.1</b> 6.50	<b>139.7</b> 5.50	_	<b>203.25-203.20</b> 8.002-8.000	<b>155.6</b> 6.12	<b>28.40</b> 1.118					
K (8)	<b>203.327-203.301</b> 8.0050-8.0040	-	<b>108.0</b> 4.25	-	-	-	-					


<sup>(1)</sup> For normal rotating shaft applications. For other conditions, see fitting practice tables on page 38.


			Axle E	nd Cap			Recessed End Cap							
Class	B <sub>d</sub>	dc	G <sub>a</sub>	Gb	G <sub>c</sub>	Torque	B <sub>f</sub>	ra	d <sub>c</sub>	G <sub>a</sub>	Gb	G <sub>c</sub>	Torque	
	mm in.	mm in.	mm in.	in. threads	mm in.	<b>N-m</b> lb-ft	mm in.	mm in.	mm in.	mm in.	in. threads	mm in.	<b>N-m</b> lb-ft	
B (4 '⊠x 8)	<b>101.6</b> 4.00	<b>61.9</b> 2.44	<b>17</b> 0.656	3/4 - 10	<b>41.3</b> 1.62	<b>149-163</b> 110-120	<b>68.3</b> 2.69	<b>6.4</b> 0.25	<b>60.3</b> 2.38	<b>13</b> 0.531	5/8 - 11	<b>38.1</b> 1.50	<b>149-163</b> 110-120	
C (5 x 9)	<b>112.7</b> 4.44	<b>76.2</b> 3.00	<b>19</b> 0.766	7/8 - 9	<b>47.6</b> 1.88	<b>190-203</b> 140-150	<b>84.1</b> 3.31	<b>6.4</b> 0.25	<b>76.2</b> 3.00	<b>13</b> 0.531	5/8 - 11	<b>38.1</b> 1.50	<b>149-163</b> 110-120	
D (5 1⊠x 10)	<b>115.9</b> 4.56	<b>88.9</b> 3.50	<b>19</b> 0.766	7/8 - 9	<b>47.6</b> 1.88	<b>190-203</b> 140-150	<b>88.9</b> 3.50	<b>6.4</b> 0.25	<b>76.2</b> 3.00	<b>19</b> 0.766	7/8 - 9	<b>47.6</b> 1.88	<b>190-203</b> 140-150	
E (6 x 11)	<b>127.0</b> 5.00	<b>98.4</b> 3.88	<b>22</b> 0.875	1-8	<b>50.8</b> 2.00	<b>339-366</b> 250-270	<b>92.1</b> 3.62	<b>6.4</b> 0.25	<b>82.6</b> 3.25	<b>22</b> 0.875	1-8	<b>50.8</b> 2.00	<b>339-366</b> 250-270	
F (6 ¹⊠x 12)	<b>134.9</b> 5.31	<b>108.0</b> 4.25	<b>25</b> 0.984	1 1/8-7	<b>54.0</b> 2.12	<b>488-529</b> 360-390	<b>106.4</b> 4.19	<b>6.4</b> 0.25	<b>88.9</b> 3.50	<b>22</b> 0.875	1-8	<b>50.8</b> 2.00	<b>339-366</b> 250-270	
G (7 x 12)	<b>130.2</b> 5.12	<b>117.5</b> 4.62	<b>28</b> 1.109	1 1/4-7	<b>57.2</b> 2.25	<b>583-624</b> 430-460	<b>103.2</b> 4.06	<b>4.8</b> 0.19	<b>101.6</b> 4.00	<b>25</b> 0.984	1 1/8-7	<b>54.0</b> 2.12	<b>488-529</b> 360-390	
G (7 x 14)	<b>130.2</b> 5.12	<b>117.5</b> 4.62	<b>28</b> 1.109	1 1/4-7	<b>57.2</b> 2.25	<b>583-624</b> 430-460	<b>103.2</b> 4.06	<b>4.8</b> 0.19	<b>101.6</b> 4.00	<b>25</b> 0.984	1 1/8-7	<b>54.0</b> 2.12	<b>488-529</b> 360-390	
GG (7)	<b>134.9</b> 5.31	<b>117.5</b> 4.62	<b>28</b> 1.109	1 1/4-7	<b>57.2</b> 2.25	<b>583-624</b> 430-460	<b>108.0</b> 4.25	<b>4.8</b> 0.19	<b>101.6</b> 4.00	<b>25</b> 0.984	1 1/8-7	<b>54.0</b> 2.12	<b>488-529</b> 360-390	
K (8)	-	-	-	-	-	-	<b>77.8</b> 3.06	<b>4.8</b> 0.19	<b>123.8</b> 4.88	<b>25</b> 0.984	1 1/8-7	<b>54.0</b> 2.12	<b>488-529</b> 380-390	

# TECHNICAL SUPPORT

#### **Full Bore Housing Dimensions**

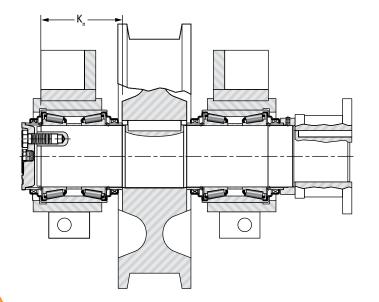

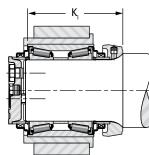

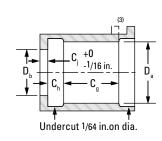

Class	Cg	C <sub>h</sub>	Cj	D <sub>a</sub> <sup>(1)</sup>	Db	Kj <sup>(2)</sup> <b>+1.02mm</b> /+.040 in0	K <sub>n</sub> <sup>(2)</sup> <b>+0.76mm</b> /+.030 in0
Class	<b>mm</b>	<b>mm</b>	mm	<b>mm</b>	<b>mm</b>	<b>mm</b>	mm
	in.	in.	in.	in.	in.	in.	in.
B (4 <sup>1</sup> ⊠x 8)	<b>85.7</b>	<b>15.9</b>	<b>12.7</b>	<b>165.328 – 165.379</b>	<b>154.0</b>	<b>174.231</b>	<b>148.044</b>
	3.38	0.62	0.50	6.5090 – 6.5110	6.06	6.8595	5.8285
C (5 x 9)	<b>114.3</b>	<b>15.9</b>	<b>12.7</b>	<b>195.490 – 195.541</b>	<b>182.6</b>	<b>205.994</b>	<b>179.807</b>
	4.50	0.62	0.50	7.6965 – 7.6985	7.19	8.1100	7.0790
D (5 ¹⊠x 10)	<b>123.8</b>	<b>15.9</b>	<b>12.7</b>	<b>208.190 – 208.241</b>	<b>196.8</b>	<b>215.544</b>	<b>189.357</b>
	4.88	0.62	0.50	8.1965 – 8.1985	7.75	8.4860	7.4550
E (6 x 11)	<b>133.4</b>	<b>15.9</b>	<b>14.3</b>	<b>220.890 – 220.941</b>	<b>209.6</b>	<b>232.212</b>	<b>202.062</b>
	5.25	0.62	0.56	8.6965 – 8.6985	8.25	9.1422	7.9552
F (6 '⊠x 12)	<b>152.4</b>	<b>19.0</b>	<b>14.3</b>	<b>252.640 – 252.691</b>	<b>238.1</b>	<b>255.270</b>	<b>228.270</b>
	6.00	0.75	0.56	9.9465 – 9.9485	9.38	10.0500	8.9870
G (7 x 12)	152.4	19.0	14.3	276.453 – 276.504	261.1	<b>243.177</b> 9.5739	-
G (7 x 14)	6.00	0.75	0.56	10.8840 –10.8860	10.28	<b>256.045</b> 10.0805	<b>227.470</b> 8.9555
GG (7)	<b>155.6</b> 6.12	_ (4)	<b>14.3</b> 0.56	<b>301.853 – 301.904</b> 11.8840 – 11.8860	<b>284.2</b> 11.19	<b>253.469</b> 9.9791	<b>237.762</b> 9.3607
K (8)	<b>98.4</b> 3.88	_ (4)	<b>14.3</b> 0.56	<b>301.777 – 301.828</b> 11.8810 – 11.8830	<b>284.2</b> 11.19	_	<b>177.820</b> 7.0008

<sup>(1)</sup> See page 38 for fitting practice information.

(2) Bearing width dimensions.

 $^{\rm (3)}$  Outer undercut can be eliminated if housing is shortened to end of the "Cg" dimension.

<sup>(4)</sup> Relief machined on cup 0.D.; housing undercut not required.

NOTE: Full bore housings are not furnished by Timken.


#### ADAPTERS AND MOUNTING DESIGNS

#### **Mounting Dimensions for Narrow Adapter**

1. Thrust lugs could be welded or machined into opening.

2. Class G and K adapter do not require thrust lugs.

3. Provide shim to give 0.25 mm to 0.38 mm (.010 in. to .015 in.) clearance between tie plate and cup 0.D. If cup turning in the adapter should occur a resilient pad may be used between the tie plate and the cup 0.D. to lightly hold the cup from turning.

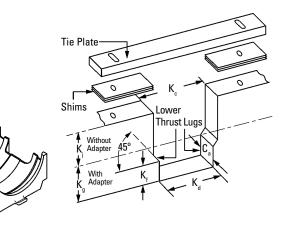



Bearing Class and Narrow Adapter Part Number	K <sub>c</sub> <b>1mm</b> +1/32 in. -0	K <sub>d</sub> <b>1mm</b> +1/32 in. -0	К <sub>f</sub>	Кg	К <sub>h</sub> <sup>(1)</sup>	к <sub>ј</sub>	κ <sub>k</sub> <sup>(1)</sup>	1n -1/3	ya nm 2 in. 0	C <sub>b</sub> <sup>(1)</sup>	C <sub>c</sub> <sup>(1)</sup>
	-0	-0						Fixed	Float		
	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	<b>mm</b>
	in.	in.	in.	in.	in.	in.	in.	in.	in.	in.	in.
B (4 12 x 8) K86888	<b>169.9</b>	<b>125.4</b>	<b>36.5</b>	<b>101.6</b>	<b>85.7</b>	<b>82.6</b>	<b>124.6</b>	<b>68.3</b>	<b>60.3</b>	<b>68.3</b>	<b>117.5</b>
	6.69	4.94	1.44	4.00	3.38	3.25	4.91	2.69	2.38	2.69	4.62
C (5 x 9) K85581	<b>200.0</b>	<b>144.5</b>	<b>42.9</b>	<b>117.5</b>	<b>100.8</b>	<b>97.6</b>	<b>143.7</b>	<b>74.6</b>	<b>66.7</b>	<b>74.6</b>	<b>146.0</b>
	7.88	5.69	1.69	4.62	3.97	3.84	5.66	2.94	2.62	2.94	5.75
D (5 ¹⊠x 10) K85530	<b>212.7</b>	<b>157.2</b>	<b>46.0</b>	<b>123.8</b>	<b>107.2</b>	<b>104.0</b>	<b>156.4</b>	<b>74.6</b>	<b>66.7</b>	<b>74.6</b>	<b>155.6</b>
	8.38	6.19	1.81	4.88	4.22	4.09	6.16	2.94	2.62	2.94	6.12
E (6 x 11) K85073	<b>225.4</b>	<b>182.6</b>	<b>58.7</b>	<b>136.5</b>	<b>113.5</b>	<b>110.3</b>	<b>181.8</b>	<b>96.8</b>	<b>88.9</b>	<b>96.8</b>	<b>166.7</b>
	8.88	7.19	2.31	5.38	4.47	4.34	7.16	3.81	3.50	3.81	6.56
F (6 '⊠x 12) K85524	<b>257.2</b>	<b>195.3</b>	<b>60.3</b>	<b>152.4</b>	<b>129.4</b>	<b>126.2</b>	<b>194.5</b>	<b>96.8</b>	<b>88.9</b>	<b>96.8</b>	<b>187.3</b>
	10.12	7.69	2.38	6.00	5.09	4.97	7.66	3.81	3.50	3.81	7.38
G (7 x 12) G (7 x 14) K83138	<b>281.0</b> 11.06	-	-	<b>168.3</b> 6.62	<b>141.3</b> 5.56	<b>138.1</b> 5.44	<b>279.4</b> 11.00	<b>181.0</b> 7.12	<b>171.4</b> 6.75	<b>181.0</b> 7.12	<b>189.7</b> 7.47
K (8) K522803	<b>306.4</b> 12.06	-	-	<b>196.8</b> 7.75	<b>154.0</b> 6.06	<b>150.8</b> 5.94	<b>304.8</b> 12.00	<b>142.9</b> 5.62	<b>133.4</b> 5.25	<b>142.9</b> 5.62	<b>142.9</b> 5.62


 $^{(1)}$  See page 34 for  $\rm K_h,\, \rm K_k,\, \rm C_b$  and  $\rm C_c$  dimensions.

D

#### Class B, Class C, Class D, Class E, and Class F Narrow Adapter

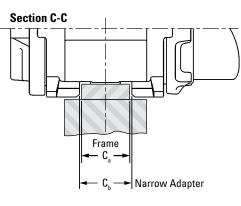

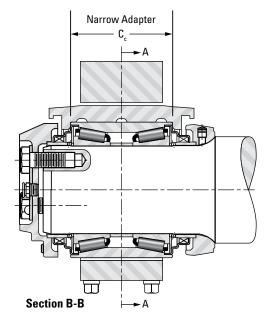

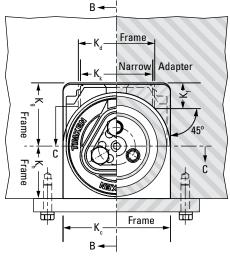

Half Front View Half Section A-A

Fig. 24

### **Class G and Class K Narrow Adapter**



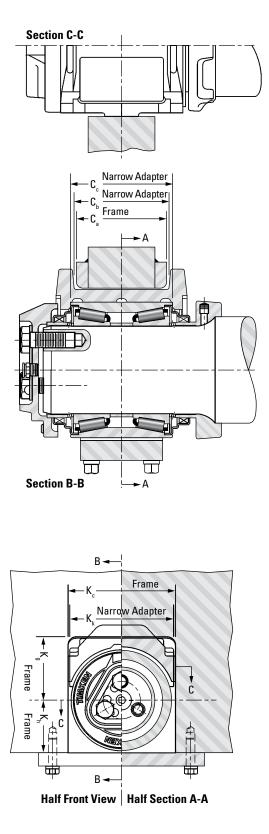



Fig. 25

**34** AP<sup>TM</sup> BEARINGS FOR INDUSTRIAL APPLICATIONS

#### **Auxiliary Parts Detail Dimensions**

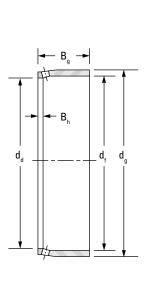

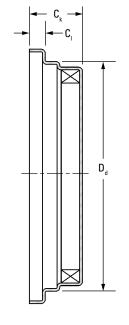

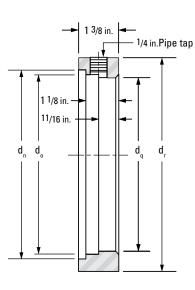

**Seal Wear Ring** 


Seal Case

**Backing Spacer** 

			Seal W	ear Ring				Seal	Case	Backing Spacer					
Class	Part Number	d <sub>d</sub>	df	d <sub>g</sub> +0.05 mm +0.002 in. -0.00 mm -0.000 in.	Bg	B <sub>h</sub>	Part Number	D <sub>d</sub>	C <sub>k</sub>	Cl	Part Number	d <sub>n</sub> - <b>0.13 mm</b> -0.005 in. <b>+0.00 mm</b> +0.000 in.	d <sub>o</sub>	d <sub>q</sub> +0.05 mm +0.002 in. -0.00 mm -0.000 in.	dr
		mm in.	mm in.	mm in.	mm in.	mm in.		mm in.	mm in.	mm in.		mm in.	mm in.	mm in.	mm in.
B (4 1🛙 x 8)	K86890	<b>101.600</b> 4.0000	<b>104.8</b> 4.12	<b>112.70</b> 4.437	<b>37.85</b> 1.490	<b>4.78</b> 0.188	K86895	<b>141.66</b> 5.577	<b>38.10</b> 1.500	<b>12.57</b> 0.495	K118891	<b>113.64</b> 4.474	<b>104.65</b> 4.120	<b>101.676</b> 4.0030	<b>133.4</b> 5.25
C (5 x 9)	K86002	<b>119.045</b> 4.6868	<b>122.2</b> 4.81	<b>131.75</b> 5.187	<b>40.23</b> 1.584	<b>5.56</b> 0.219	K85600	<b>164.95</b> 6.494	<b>40.87</b> 1.609	<b>12.37</b> 0.487	K120198	<b>132.69</b> 5.224	<b>122.10</b> 4.807	<b>119.139</b> 4.6905	<b>152.4</b> 6.00
D (5 ¹⊠x 10)	K85507	<b>131.732</b> 5.1863	<b>134.9</b> 5.31	<b>144.45</b> 5.687	<b>40.23</b> 1.584	<b>5.56</b> 0.219	K86860	<b>177.65</b> 6.994	<b>40.87</b> 1.609	<b>12.37</b> 0.487	K120178	<b>145.39</b> 5.724	<b>134.80</b> 5.307	<b>131.839</b> 5.1905	<b>165.1</b> 6.50
E (6 x 11)	K85508	<b>144.419</b> 5.6858	<b>147.6</b> 5.81	<b>157.15</b> 6.187	<b>42.62</b> 1.678	<b>6.35</b> 0.250	K86861	<b>188.77</b> 7.432	<b>41.63</b> 1.639	<b>13.16</b> 0.518	K120190	<b>158.09</b> 6.224	<b>147.50</b> 5.807	<b>144.539</b> 5.6905	<b>177.8</b> 7.00
F (6 ¹⊠x 12)	K85509	<b>157.107</b> 6.1853	<b>160.3</b> 6.31	<b>173.02</b> 6.812	<b>47.40</b> 1.866	<b>9.52</b> 0.375	K85520	<b>212.90</b> 8.382	<b>47.98</b> 1.889	<b>13.97</b> 0.550	K120160	<b>173.96</b> 6.849	<b>160.20</b> 6.307	<b>157.239</b> 6.1905	<b>190.5</b> 7.50
G (7 x 12)	K147767	<b>177.724</b> 6.9970	<b>181.0</b> 7.12	<b>195.25</b> 7.687	<b>44.22</b> 1.741	<b>6.35</b> 0.250	K96501	<b>239.88</b> 9.444	<b>46.81</b> 1.834	<b>14.17</b> 0.558	K118866	<b>196.19</b> 7.724	<b>180.85</b> 7.120	<b>177.876</b> 7.0030	<b>209.6</b> 8.25
G (7 x 14)	K147767	<b>177.724</b> 6.9970	<b>181.0</b> 7.12	<b>195.25</b> 7.687	<b>44.22</b> 1.741	<b>6.35</b> 0.250	K96501	<b>239.88</b> 9.444	<b>46.81</b> 1.834	<b>14.17</b> 0.558	K118866	<b>196.19</b> 7.724	<b>180.85</b> 7.120	<b>177.876</b> 7.0030	<b>209.6</b> 8.25
GG (7)	K147767	<b>177.724</b> 6.9970	<b>181.0</b> 7.12	<b>195.25</b> 7.687	<b>44.22</b> 1.741	<b>6.35</b> 0.250	K99424	<b>261.32</b> 10.288	<b>49.58</b> 1.952	<b>18.92</b> 0.745	K118866	<b>196.19</b> 7.724	<b>180.85</b> 7.120	<b>177.876</b> 7.0030	<b>209.6</b> 8.25
K (8)	K504074	<b>203.098</b> 7.9960	<b>206.4</b> 8.12	<b>219.08</b> 8.625	<b>45.24</b> 1.781	<b>7.95</b> 0.313	K504073	<b>261.32</b> 10.288	<b>49.58</b> 1.952	<b>18.92</b> 0.745	-	-	-	-	-

# **TECHNICAL SUPPORT** •

#### **Auxiliary Parts Detail Dimensions**

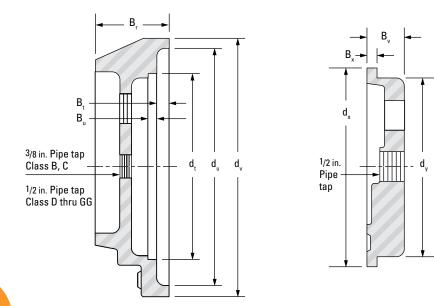


Axle End Cap


**Recessed End Cap** 

				Axle End Cap				Recessed End Cap						
Class		dt	du	d <sub>v</sub> max	B <sub>r</sub>	Bt	Bu		d <sub>x</sub>	dy	B <sub>v</sub>	B <sub>X</sub>		
	Part Number	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	Part Number	mm in.	mm in.	mm in.	mm in.		
B (4 ¹⊠x 8)	K86877	<b>113.64</b> 4.474	<b>146.0</b> 5.75	<b>158.0</b> 6.22	<b>58.7</b> 2.31	<b>7.9</b> 0.31	<b>5.6</b> 0.22	K399069	<b>114.3</b> 4.50	<b>104.0</b> 4.09	<b>23.8</b> 0.94	<b>4.8</b> 0.19		
C (5 x 9)	K86003	<b>132.69</b> 5.224	<b>173.0</b> 6.81	<b>188.1</b> 7.41	<b>57.2</b> 2.25	<b>11.1</b> 0.44	<b>5.5</b> 0.22	K399070	<b>133.4</b> 5.25	<b>121.4</b> 4.78	<b>25.4</b> 1.00	<b>4.8</b> 0.19		
D (5 '⊠x 10)	K85521	<b>145.39</b> 5.724	<b>185.7</b> 7.31	<b>200.8</b> 7.91	<b>55.6</b> 2.19	<b>11.1</b> 0.44	<b>5.6</b> 0.22	K399071	<b>146.0</b> 5.75	<b>134.1</b> 5.28	<b>27.0</b> 1.06	<b>6.4</b> 0.25		
E (6 x 11)	K85510	<b>158.09</b> 6.224	<b>198.4</b> 7.81	<b>216.7</b> 8.53	<b>61.9</b> 2.44	<b>11.1</b> 0.44	<b>6.4</b> 0.25	K399072	<b>158.8</b> 6.25	<b>146.8</b> 5.78	<b>30.2</b> 1.19	<b>6.4</b> 0.25		
F (6 ¹⊠x 12)	K85517	<b>173.96</b> 6.849	<b>225.4</b> 8.88	<b>243.7</b> 9.59	<b>63.5</b> 2.50	<b>16.7</b> 0.66	<b>6.4</b> 0.25	K399073	<b>177.8</b> 7.00	<b>159.5</b> 6.28	<b>31.8</b> 1.25	<b>6.4</b> 0.25		
G (7 x 12)	K95199	<b>196.19</b> 7.724	<b>250.8</b> 9.88	<b>269.9</b> 10.62	<b>57.2</b> 2.25	<b>11.1</b> 0.44	<b>5.6</b> 0.22	K399074	<b>196.8</b> 7.75	<b>180.2</b> 7.09	<b>33.3</b> 1.31	<b>6.4</b> 0.25		
G (7 x 14)	K412057	<b>196.19</b> 7.724	<b>250.8</b> 9.88	<b>269.9</b> 10.62	<b>57.2</b> 2.25	<b>11.1</b> 0.44	<b>5.6</b> 0.22	K399074	<b>196.8</b> 7.75	<b>180.2</b> 7.09	<b>33.3</b> 1.31	<b>6.4</b> 0.25		
GG (7)	-	<b>196.19</b> 7.724	<b>250.8</b> 9.88	<b>269.9</b> 10.62	<b>57.2</b> 2.25	<b>11.1</b> 0.44	<b>5.6</b> 0.22	K399074	<b>196.8</b> 7.75	<b>180.2</b> 7.09	<b>33.3</b> 1.31	<b>6.4</b> 0.25		
K (8)	-	-	_	-	-	-	-	K504075	<b>222.2</b> 8.75	<b>205.6</b> 8.09	<b>34.9</b> 1.38	<b>11.9</b> 0.47		

**Backing Rings Without Shroud** 

# **Auxiliary Parts Detail Dimensions**

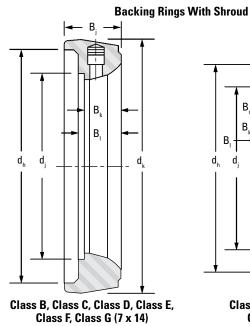

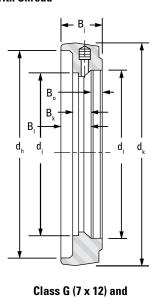


Class GG (7)

.12 in.

B,

3.0 mm

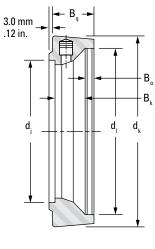

Class B, Class C, Class D

Class E, Class F, Class G D

								g Rings									
				Backin	g Ring With	Shroud				Backing Ring Without Shroud							
Class	Part Number	d <sub>h</sub>	dj	d <sub>k</sub> max.	d <sub>l</sub> - <b>0.15 mm</b> -0.006 in. <b>.00 mm</b> .000 in.	Bj	B <sub>k</sub>	BI	B <sub>o</sub>	Part Number	dj - <b>0.20 mm</b> -0.008 in. <b>0.00 mm</b> 0.000 in.	d <sub>k</sub> max.	d <sub>l</sub> - <b>0.13 mm</b> -0.005 in. <b>.00 mm</b> .000 in.	B <sub>k</sub>	B <sub>o</sub>	Bq	
		mm in.	mm in.	mm in.	mm in.	<b>mm</b> in.	mm in.	mm in.	mm in.		mm in.	<b>mm</b> in.	mm in.	<b>mm</b> in.	<b>mm</b> in.	mm in.	
B (4 ¹⊠x 8)	K86874	<b>146.0</b> 5.75	<b>112.67</b> <sup>(2)</sup> 4.436	<b>157.2</b> 6.19	-	<b>39.7</b> 1.56	<b>26.19</b> 1.031	<b>31.8</b> 1.25	-	(1)	<b>112.67</b> 4.436	<b>153.2</b> 6.03	-	<b>26.19</b> 1.031	-	<b>28.6</b> 1.12	
C (5 x 9)	K85588	<b>173.8</b> 6.84	<b>131.72</b> <sup>(2)</sup> 5.186	<b>187.3</b> 7.38	-	<b>42.9</b> 1.69	<b>26.19</b> 1.031	<b>31.8</b> 1.25	-	(1)	<b>131.72</b> 5.186	<b>176.2</b> 6.94	-	<b>26.19</b> 1.031	-	<b>28.6</b> 1.12	
D (5 ¹⊠x 10)	K85525	<b>185.7</b> 7.31	<b>144.42</b> <sup>(2)</sup> 5.686	<b>200.0</b> 7.88	-	<b>42.9</b> 1.69	<b>26.19</b> 1.031	<b>31.8</b> 1.25	-	K127205	<b>144.42</b> 5.686	<b>188.9</b> 7.44	-	<b>26.19</b> 1.031	-	<b>28.6</b> 1.12	
E (6 x 11)	K85095	<b>199.2</b> 7.84	<b>157.12</b> <sup>(2)</sup> 6.186	<b>215.9</b> 8.50	-	<b>47.6</b> 1.88	<b>30.15</b> 1.187	<b>36.5</b> 1.44	-	K127206	<b>157.12</b> 6.186	<b>208.0</b> 8.19	<b>178.51</b> 7.028	<b>30.15</b> 1.187	<b>8.7</b> 0.34	<b>42.1</b> 1.66	
F (6 ¹⊠x 12)	K85516	<b>227.0</b> 8.94	<b>173.00</b> <sup>(2)</sup> 6.811	<b>242.9</b> 9.56	-	<b>50.0</b> 1.97	<b>27.00</b> 1.063	<b>33.3</b> 1.31	-	K125685	<b>173.00</b> 6.811	<b>220.7</b> 8.69	<b>191.21</b> 7.528	<b>27.00</b> 1.063	<b>8.7</b> 0.34	<b>38.9</b> 1.53	
G (7 x 12) GG (7)	K147766	<b>250.8</b> 9.88	<b>195.22</b> <sup>(3)</sup> 7.686	<b>266.7</b> 10.50	<b>203.10</b> 7.996	<b>48.3</b> 1.90	<b>15.85</b> .624	-	<b>12.7</b> 0.50	K153497	<b>195.22</b> 7.686	<b>266.7</b> 10.50	<b>203.10</b> 7.996	-	<b>12.7</b> 0.50	<b>33.3</b> 1.31	
G (7 x 14)	K95200	<b>250.8</b> 9.88	<b>195.22</b> <sup>(2)</sup> 7.686	<b>266.7</b> 10.50	-	<b>48.4</b> 1.91	<b>28.58</b> 1.125	<b>34.1</b> 1.34	-	-	-	-	-	-	-	-	
K (8)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	

(1) Limited availability; consult your Timken representative.

(2) 0.00 to -0.13 mm (0.000 in. to -0.005 in.)

<sup>(3)</sup> 0.00 to -0.20 mm (0.000 in. to -0.008 in.)

					Cone Fittir	ng Practice			Cup Fitting Practice					
	Bearing P	art Number		Rotatir	ig Cone									
Class			Heavy Loads Moderate Speeds		Hot Applications, Table Rolls, Etc.		Stationary Cone		Stationary Cup		Rotating Cup <sup>(1)</sup>			
	Lone Lun		Cone Seat d <sub>a</sub>	Resultant Fit	Cone Seat d <sub>a</sub>	Resultant Fit	Cone Seat d <sub>a</sub>	Resultant Fit	Cup Seat D <sub>a</sub>	Resultant Fit	Cup Seat D <sub>a</sub>	Resultant Fit		
B (4 ¼ x 8)	HM120848	HM120817XD	101.702 101.676	0.102T 0.051T	101.676 101.650	0.076T 0.025T	101.575 101.549	0.025L 0.076L	165.328 165.379	0.102L 0.279L	165.100 165.125	0.102T 0.051T		
C (5 x 9)	HM124646	HM124618XD	119.164 119.138	0.102T 0.051T	119.138 119.112	0.076T 0.025T	119.037 119.011	0.025L 0.076L	195.490 195.541	0.102L 0.279L	195.262 195.287	0.102T 0.051T		
D (5 ½ x 10)	HM127446	HM127415XD	131.864 131.838	0.114T 0.064T	131.838 131.812	0.089T 0.038T	131.737 131.711	0.013L 0.064L	208.190 208.241	0.102L 0.279L	207.962 207.987	0.102T 0.051T		
E (6 x 11)	HM129848	HM129814XD	144.564 144.538	0.114T 0.064T	144.538 144.512	0.089T 0.038T	144.437 144.411	0.013L 0.064L	220.890 220.941	0.102L 0.279L	220.662 220.687	0.102T 0.051T		
F (6 ½ x 12)	HM133444	HM133416XD	157.264 157.238	0.114T 0.064T	157.238 157.212	0.089T 0.038T	157.137 157.111	0.013L 0.064L	252.640 252.691	0.102L 0.279L	252.412 252.437	0.102T 0.051T		
G (7)	HM136948	HM136916XD	177.902 177.876	0.114T 0.064T	177.876 177.850	0.089T 0.038T	177.775 177.749	0.013L 0.064L	276.453 276.504	0.102L 0.279L	276.225 276.250	0.102T 0.051T		
GG (7)	H337846	H337816XD	177.902 177.876	0.114T 0.064T	177.876 177.850	0.089T 0.038T	177.775 177.749	0.013L 0.064L	301.853 301.904	0.025L 0.127L	301.701 301.726	0.102T 0.051T		
K (8)	M241547	M241513XD	203.327 203.302	0.127T 0.076T	203.302 203.276	0.102T 0.051T	203.175 203.149	0.025L 0.076L	301.777 301.828	0.025L 0.203L	301.625 301.650	0.102T 0.051T		

# Industrial Equipment – Fitting Practice For AP Bearings (Millimeters)

<sup>(1)</sup>Requires 350 inspection code to provide a cup 0.D. tolerance of +0.076 mm +0.102 mm in applications requiring a press fit for the cup.

NOTE: T = Tight; L = Loose

For tolerance information, contact your Timken representative.

### Industrial Equipment – Fitting Practice For AP Bearings (Inches)

					Cone Fittir	ng Practice				Cup Fittin	g Practice	
	Bearing	Part Number		Rotatir	ig Cone							
Class			Heavy Loads Moderate Speeds		Hot Applications, Table Rolls, Etc.		Stationary Cone		Station	ary Cup	Rotating Cup <sup>(1)</sup>	
	Cone Cup		Cone Seat d <sub>a</sub>	Resultant Fit	Cone Seat d <sub>a</sub>	Resultant Fit	Cone Seat d <sub>a</sub>	Resultant Fit	Cup Seat D <sub>a</sub>	Resultant Fit	Cup Seat D <sub>a</sub>	Resultant Fit
B (4 ¼ x 8)	HM120848	HM120817XD	4.0040 4.0030	0.0040T 0.0020T	4.0030 4.0020	0.0030T 0.0010T	3.9990 3.9980	0.0010L 0.0030L	6.5090 6.5110	0.0040L 0.0110L	6.5000 6.5010	0.0040T 0.0020T
C (5 x 9)	HM124646	HM124618XD	4.6915 4.6905	0.0040T 0.0020T	4.6905 4.6895	0.0030T 0.0010T	4.6865 4.6855	0.0010L 0.0030L	7.6965 7.6985	0.0040L 0.0110L	7.6875 7.6885	0.0040T 0.0020T
D (5 ½ x 10)	HM127446	HM127415XD	5.1915 5.1905	0.0045T 0.0025T	5.1905 5.1895	0.0035T 0.0015T	5.1865 5.1855	0.0005L 0.0025L	8.1965 8.1985	0.0040L 0.0110L	8.1875 8.1885	0.0040T 0.0020T
E (6 x 11)	HM129848	HM129814XD	5.6915 5.6905	0.0045T 0.0025T	5.6905 5.6895	0.0035T 0.0015T	5.6865 5.6855	0.0005L 0.0025L	8.6965 8.6985	0.0040L 0.0110L	8.6875 8.6885	0.0040T 0.0020T
F (6 ½ x 12)	HM133444	HM133416XD	6.1915 6.1905	0.0045T 0.0025T	6.1905 6.1895	0.0035T 0.0015T	6.1865 6.1855	0.0005L 0.0025L	9.9465 9.9485	0.0040L 0.0110L	9.9375 9.9385	0.0040T 0.0020T
G (7)	HM136948	HM136916XD	7.0040 7.0030	0.0045T 0.0025T	7.0030 7.0020	0.0035T 0.0015T	6.9990 6.9980	0.0005L 0.0025L	10.8840 10.8860	0.0040L 0.0110L	10.8750 10.8760	0.0040T 0.0020T
GG (7)	H337846	H337816XD	7.0040 7.0030	0.0045T 0.0025T	7.0030 7.0020	0.0035T 0.0015T	6.9990 6.9980	0.0005L 0.0025L	11.8840 11.8860	0.0010L 0.0050L	11.8780 11.8790	0.0050T 0.0020T
K (8)	M241547	M241513XD	8.0050 8.0040	0.0050T 0.0030T	8.0040 8.0030	0.0040T 0.0020T	7.9990 7.9980	0.0010L 0.0030L	11.8810 11.8830	0.0010L 0.0080L	11.8750 11.8760	0.0040T 0.0020T

(1) Requires 350 inspection code to provide a cup 0.D. tolerance of +0.003 in. +0.004 in. in applications requiring a press fit for the cup.

NOTE: T = Tight; L = Loose

For tolerance information, contact your Timken representative.

# Press Fit Force Required to Apply Collars, Gears, or Couplings Used to Retain an AP Bearing

The clamping force resulting from a press fit is equal to:

$$F = 1/2 \pi f L \delta E [1-(b/c)^2]$$


### Where:

- F = Clamping Force newton (lb)
- f = Coefficient of Friction = .17
- L = Length of Clamping Part meter (in.)
- $\delta$  = Fit on Dia meter (in.)
- $E = 2.068 \times 10^{11} \text{ pascal (} 30 \times 10^6 \text{ lb/in}^2\text{)}$


b = I.D. of Clamping Part - mm (in.)

c = 0.D. of Clamping Part - mm (in.)

### **Shaft Stress Calculation for Cars and Rolling Stock**

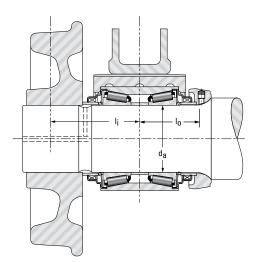

#### **Inboard Journal**

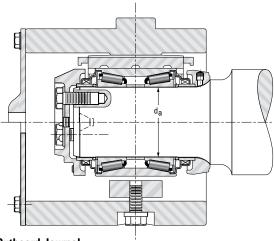

**Outboard Journal** 

(lass	Force Min.					
Class	Kilonewtons Tons					
B & C	<b>267-35</b> 30-40					
D, E, & F	<b>445-534</b> 50-60					
G & GG	<b>534-623</b> 60-70					
К	<b>445</b> 50					

Table 1

Where:

S = Axle Stress - MPa (lb/in<sup>2</sup>)

P = Bearing Load - newton (lb)

d<sub>a</sub> = Cone Seat - mm (in.)

 $I_i$  and  $I_o = Moment Arm - mm$  (in.)

Inboard Journal -  $I_i$  = Distance from bearing centerline to wheel load centerline

Outboard Journal -  $I_{o}$  = Distance from bearing centerline to point on  $d_{a}$  tangent to shaft radius

01	da	(da) <sup>3</sup>	lo
Class	<b>mm</b>	mm <sup>3</sup>	mm
	in.	in. <sup>3</sup>	in.
B (4 ¹⊠x 8)	<b>101.600</b>	<b>105x10</b> <sup>4</sup>	<b>89.2</b>
	4.0000	64	3.51
C (5 x 9)	<b>119.062</b>	<b>169x10</b> <sup>4</sup>	<b>104.6</b>
	4.6875	103	4.12
D (5 ¹⊠x 10)	<b>131.750</b>	<b>229x10</b> <sup>4</sup>	<b>109.5</b>
	5.1870	140	4.31
E (6 x 11)	<b>144.450</b>	<b>301x10</b> <sup>4</sup>	<b>119.4</b>
	5.687	184	4.70
F (6 ¹⊠x 12)	<b>157.150</b>	<b>388x10</b> <sup>4</sup>	<b>132.1</b>
	6.1870	237	5.20
G (7 x 12)	<b>177.787</b>	<b>562x10</b> <sup>4</sup>	<b>122.4</b>
	6.9995	343	4.82
G (7 x 14)	<b>177.787</b>	<b>562x10</b> <sup>4</sup>	<b>135.1</b>
	6.9995	343	5.32
GG (7)	<b>177.787</b>	<b>562x10</b> <sup>4</sup>	<b>127.3</b>
	6.9995	343	5.01
K (8)	<b>203.200</b>	<b>839x10</b> <sup>4</sup>	<b>100.8</b>
	8.0000	512	3.97

Table 2

# **BEARING LIFE EQUATIONS**

$$L_{10} = \left( \frac{C_{90}}{P} \right)^{\frac{10}{3}} - \left( \frac{1.5 \times 10^6}{n} \right)$$


Where:

 $L_{10}$  = Rated life in hours (life expectancy associated with 90% reliability)

 $C_{\scriptscriptstyle 90}$  = Basic dynamic radial load rating at 500 RPM for 3000 hr  $L_{\scriptscriptstyle 10}$ 

P = Dynamic equivalent radial load from a combination of radial and thrust loads

n = Rotational speed in RPM

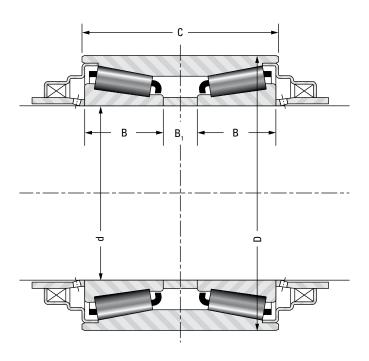

# D

# **Basic AP Bearing Dimensions and Ratings**

	Bearing Part No.						P		l @ 500 RPM For Hr L <sub>10</sub>		
	Douring	r urt no.	d Cone Bore	D Cup O.D.	C Cup Width	B Cone Length	B <sub>1</sub> Spacer Length	Radial C <sub>90</sub>	Thrust C <sub>a90</sub>	K <sup>(1)</sup>	
Class	Cone Cone						Longin	N	N	Factor	
	Spacer	Сир	mm in.	mm in.	mm in.	mm in.	mm in.	lbf	lbf		
B (4 ¹⊠x 8)	HM120848 HM120848XA	HM120817XD	<b>101.600</b> 4.0000	<b>165.100</b> 6.5000	<b>114.300</b> 4.5000	<b>49.212</b> 1.9375	<b>7.925</b> .3120	<b>120000</b> 26900	<b>31000</b> 7000	2.21	
C (5 x 9)	HM124646 HM124646XA	HM124618XD	<b>119.062</b> 4.6875	<b>195.262</b> 7.6875	<b>142.875</b> 5.6250	<b>57.150</b> 2.2500	<b>22.225</b> .8750	<b>172000</b> 38600	<b>44500</b> 10000	2.21	
D (5 '⊠x 10)	HM127446 HM127446XA	HM127415XD	<b>131.750</b> 5.1870	<b>207.962</b> 8.1875	<b>152.400</b> 6.0000	<b>57.150</b> 2.2500	<b>31.750</b> 1.2500	<b>186000</b> 41800	<b>48500</b> 10900	2.21	
E (6 x 11)	HM129848 HM129848XA	HM129814XD	<b>144.450</b> 5.6870	<b>220.662</b> 8.6875	<b>163.512</b> 6.4375	<b>58.738</b> 2.3125	<b>38.100</b> 1.5000	<b>195000</b> 43800	<b>50700</b> 11400	2.21	
F (6 ¹⊠x 12)	HM133444 HM133444XA	HM133416XD	<b>157.150</b> 6.1870	<b>252.412</b> 9.9375	<b>184.150</b> 7.2500	<b>69.850</b> 2.7500	<b>38.100</b> 1.5000	<b>266000</b> 59700	<b>69000</b> 15500	2.21	
G (7 x 12) G (7 x 14)	HM136948 HM136948XA	HM136916XD	<b>177.787</b> 6.9995	<b>276.225</b> 10.8750	<b>185.725</b> 7.3120	<b>74.612</b> 2.9375	<b>31.750</b> 1.2500	<b>305000</b> 68600	<b>79200</b> 17800	2.21	
GG (7)	H337846 H337846XA	H337816XD	<b>177.787</b> 6.9995	<b>301.701</b> 11.8780	<b>196.850</b> 7.7500	<b>87.312</b> 3.4375	<b>15.875</b> .6250	<b>388000</b> 87300	<b>132110</b> 29700	1.69	
K (8)	M241547 M241547XA	M241513XD	<b>203.200</b> 8.0000	<b>301.625</b> 11.8750	<b>140.097</b> 5.5156	<b>57.944</b> 2.2812	<b>9.525</b> .3750	<b>266000</b> 59700	<b>87600</b> 19700	1.76	

<sup>(1)</sup> K Factor is defined as the tapered roller bearing radial to axial dynamic capacity ratio.

### ASSEMBLY AND DISASSEMBLY

### **Bearing Installation**

Bearing assemblies should be stored in a clean dry place, protected from moisture, and kept dry until they are installed on the shaft.

Bearing assemblies should not be removed from the shipping package nor should the protective wrapping be removed until they are installed.

Do not remove the cardboard insert from the bore of the bearing assembly. This insert will hold the cone spacer in alignment with the bearing cones when installing the bearing assembly on the pilot sleeve.

#### **Pressing Bearing Assemblies on Shafts**

The amount of press fit of the bearing on the shaft is predetermined by the dimensional tolerances of the shaft and bearing cones.

Tools designed for roller bearing installation and removal should be used.

Timken AP bearings may be installed or removed with a bearing press, wheel press, or with portable fixtures depending on production requirements.

Coat the bearing seats of the axle with castor oil, heavy mineral oil, or a molybdenumdisulphide and oil mixture. (Do not use white lead.) Lead compounds may be detrimental to lubricating greases by acting as an oxidation catalyst.

A thin coating of rust preventive can be applied to the axle fillet if the standard backing ring (Fig. 26) is used. The rust preventive used must not contain lead or other compounds which may be detrimental to lubricating greases.

The bearing assemblies are shipped with a protective coating of grease over the vent fitting. Care should be taken to see that the grease is not wiped off when the bearings are applied to the axles.

NOTE: Heat must not be applied to the bearing cone assemblies to facilitate installation.

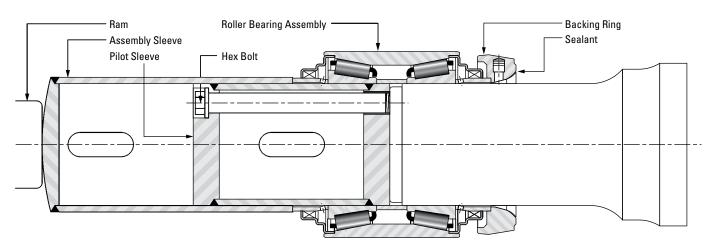


Fig. 26 Separate sleeve method of applying roller bearings to a shaft

D

A pilot sleeve should be used to keep the cone spacer in alignment with the bores of the cones and to guide the bearing assembly on the axle (page 45).

An assembly sleeve which contacts the seal wear ring outer face and telescopes over the pilot sleeve is used to press the bearing on the axle.

When the bearing assembly is slipped on the pilot sleeve and the cardboard insert is ejected, the seal wear ring should be held in place to prevent it from sliding out of the enclosure seal.

If the seal wear ring slips out of the assembly it must be inserted into the enclosure seal correctly and carefully, chamfered end first, so that the outer lip of the seal does not turn under when the seal lips are expanded over the seal wear ring.

NOTE: Do not insert any tool or other instrument between the seal element lips and seal wear ring. This may damage the seal element lips or scratch the seal wear ring resulting in bearing lubricant leakage.

To make sure that the bearings are firmly seated against the axle fillet, the forces shown (Table 3) should be applied to the bearings after the surge of the pressure gage indicates that the bearings have contacted the axle fillet.

Due to the rubbing type seals, the bearing assembly will not rotate freely at initial application. New bearing assemblies are pre-set at the factory. No adjustment is necessary at installation.

Class	Clamping Force
UI355	Kilonewtons Tons
B & C	<b>267-356</b> 30-40
D, E, & F	<b>445-534</b> 50-60
G & GG	<b>534-623</b> 60-70
К	<b>445</b> 50

**Table 3 Bearing installation force** 

### **Applying The Axle End Cap**

Remove the axle end cap assembly from the carton and remove the cardboard cap screw retainer.

Apply the axle end cap, locking plate, and cap screws to the end of the axle as a unit.

A ratchet wrench or an impact wrench may be used to run up the cap screws.

Tighten the cap screws with a torque wrench to the torque specified in (Table 4). Re-check each cap screw several times until the specified torque is obtained for each cap screw.


Con Communication	Torque
Cap Screw Size	<b>N-m</b> lb-ft
%⊠in.	<b>149-163</b> 110-120
³⊠in.	<b>149-163</b> 110-120
™in.	<b>190-203</b> 140-150
1 in.	<b>339-366</b> 250-270
1 '⊠in.	<b>488-529</b> 360-390
1 '⊠in.	<b>583-624</b> 430-460

#### Table 4 Cap screw tightening torque

Lock the cap screws by bending all tabs of the locking plate  $\boxtimes$ at against the sides of the cap screw heads. For the recessed end cap, simply wire the heads together.

If water or humid conditions exist, a bead of sealant can be applied around the joint of the backing ring and shaft, after the bearing assembly is pressed in place (not required for backing rings press fitted on shaft step).

# **Equipment For Bearing Installation and Removal**

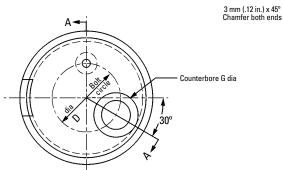



3 mm (.12 in.) x 45° Chamfer both ends


> 38 mm (1.5 in.)

> > Pin

M dia

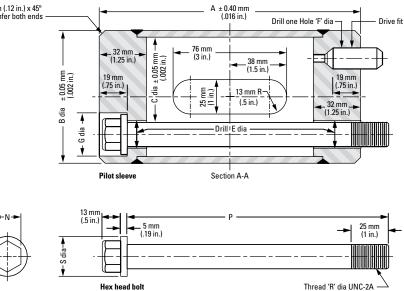

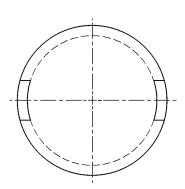


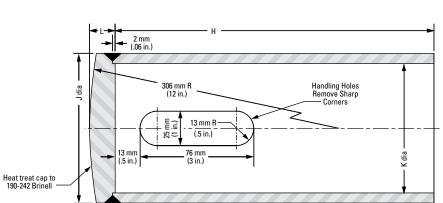

Assembly sleeve

End Cap		All			Axle E	nd Cap			Recessed				All				Ax	le End (	Cap			R	ecesse	d	
			Pilot Sleeve							Assembly Sleeve			Pin Hex Head Bolt				Pin	Pin Hex Head Bolt							
Class	A ±0.04 mm ±0.016 in.	B ±0.05 mm ±0.002 in.	C +0.05 mm +0.002 in. -0.00 mm -0.000 in.	D	E	F	G	D	E	F	G	Н	J	к	L	М	N	Р	R	S	М	N	Р	R	S
	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	mm in.	in.	mm in.	in.	mm in.	mm in.	in.	mm in.	in.	mm in.
B (4 <sup>1</sup> ±x 8)	<b>184</b> 7.25	<b>101.04</b> 3.978	<b>88.90</b> 3.500	<b>61.9</b> 2.44	<b>20</b> .781	<b>16</b> .625	<b>30</b> 1.19	<b>60.3</b> 2.38	<b>17</b> .656	<b>13</b> .500	<b>27</b> 1.06	<b>229</b> 9	<b>116</b> 4.56	<b>101.88</b> 4.011	<b>19</b> 0.75	<b>16</b> 0.625	0.812	<b>184</b> 7.25	3/4-10	<b>29</b> 1.12	<b>13</b> 0.5	0.625	<b>184</b> 7.25	5/8-11	<b>25</b> 1.00
C (5 x 9)	<b>216</b> 8.5	<b>118.49</b> 4.665	<b>106.35</b> 4.187	<b>7.62</b> 3.00	<b>23</b> .906	<b>19</b> .734	<b>33</b> 1.31	<b>76.2</b> 3.00	<b>17</b> .656	<b>13</b> .500	<b>27</b> 1.06	<b>254</b> 10	<b>133</b> 5.25	<b>119.33</b> 4.698	<b>19</b> 0.75	<b>19</b> 0.734	0.875	<b>216</b> 8.5	7/8-9	<b>32</b> 1.25	<b>13</b> 0.5	0.625	<b>216</b> 8.5	5/8-11	<b>25</b> 1.00
D (5 1±x 10)	<b>216</b> 8.5	<b>131.19</b> 5.165	<b>119.05</b> 4.687	<b>88.9</b> 3.50	<b>23</b> .906	<b>19</b> .734	<b>33</b> 1.31	<b>76.2</b> 3.00	<b>23</b> .906	<b>19</b> .734	<b>33</b> 1.31	<b>260</b> 10.25	<b>146</b> 5.75	<b>132.03</b> 5.198	<b>19</b> 0.75	<b>19</b> 0.734	0.875	<b>216</b> 8.5	7/8-9	<b>32</b> 1.25	<b>19</b> 0.734	0.875	<b>216</b> 8.5	7/8-9	<b>32</b> 1.25
E (6 x 11)	<b>238</b> 9.38	<b>143.89</b> 5.665	<b>131.75</b> 5.187	<b>98.4</b> 3.88	<b>26</b> 1.031	<b>21</b> .844	<b>37</b> 1.44	<b>82.6</b> 3.25	<b>26</b> 1.031	<b>21</b> .840	<b>37</b> 1.44	<b>279</b> 11	<b>159</b> 6.25	<b>144.73</b> 5.698	<b>19</b> 0.75	<b>21</b> 0.844	0.938	<b>238</b> 9.38	1-8	<b>35</b> 1.38	<b>21</b> 0.844	0.938	<b>238</b> 9.38	1-8	<b>35</b> 1.38
F (6 1± x 12)	<b>260</b> 10.25	<b>156.59</b> 6.165	<b>144.45</b> 5.687	<b>108.0</b> 4.25	<b>30</b> 1.156	<b>24</b> .953	<b>40</b> 1.56	<b>88.9</b> 3.50	<b>26</b> 1.031	<b>21</b> .844	<b>37</b> 1.44	<b>279</b> 11	<b>171</b> 6.75	<b>157.43</b> 6.198	<b>25</b> 1	<b>24</b> 0.953	1	<b>260</b> 10.25	1 1/8-7	<b>38</b> 1.5	<b>21</b> 0.844	0.938	<b>260</b> 10.25	1-8	<b>35</b> 1.38
G (7 x 12) G (7 x 14)	<b>260</b> 10.25	<b>177.24</b> 6.978	<b>165.10</b> 6.500	<b>117.5</b> 4.62	<b>33</b> 1.281	<b>27</b> 1.078	<b>43</b> 1.69	<b>101.6</b> 4.00	<b>30</b> 1.156	<b>24</b> .953	<b>40</b> 1.56	<b>283</b> 11.12	<b>192</b> 7.56	<b>178.1</b> 7.012	<b>32</b> 1.25	<b>27</b> 1.078	1.125	<b>260</b> 10.25	1 1/4-7	<b>41</b> 1.62	<b>24</b> 0.953	1.000	<b>260</b> 10.25	1 1/8-7	<b>38</b> 1.50
GG (7)	<b>260</b> 10.25	<b>177.24</b> 6.978	<b>165.10</b> 6.500	<b>117.5</b> 4.62	<b>33</b> 1.281	<b>27</b> 1.078	<b>43</b> 1.69	<b>101.6</b> 4.00	<b>30</b> 1.156	<b>24</b> .953	<b>40</b> 1.56	<b>283</b> 11.12	<b>192</b> 7.56	<b>178.1</b> 7.012	<b>32</b> 1.25	<b>27</b> 1.078	1.125	<b>260</b> 10.25	1 1/4-7	<b>41</b> 1.62	<b>24</b> 0.953	1.000	<b>260</b> 10.25	1 1/8-7	<b>38</b> 1.50
K (8)	<b>203</b> 8	<b>202.64</b> 7.978	<b>190.50</b> 7.500	-	_	-	-	<b>123.8</b> 4.88	<b>30</b> 1.156	<b>24</b> .953	<b>40</b> 1.56	<b>216</b> 8.5	<b>222</b> 8.75	<b>203.5</b> 8.012	<b>38</b> 1.5	_	-	_	-	_	<b>24</b> 0.953	1.000	<b>203</b> 8	1 1/8-7	<b>38</b> 1.50

### **Equipment For Bearing Installation and Removal**

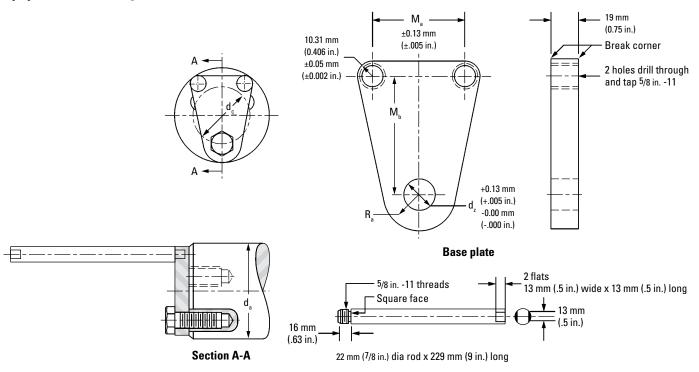

	d <sub>a</sub> <sup>(1)</sup>			Axle E	nd Cap		Recessed End Cap					
Class	u <sub>a</sub>	Ma	Mb	R <sub>a</sub>	d <sub>c</sub>	dz	Mb	R <sub>a</sub>	d <sub>c</sub>	dz		
	mm in.	mm in.	mm in.	mm in.	mm in.	in.	mm in.	mm in.	mm in.	in.		
B (4 <sup>1</sup> ± x 8)	<b>101.702-101.676</b> 4.0040-4.0030	<b>50.80</b> 2.000	<b>61.44</b> 2.419	<b>16.8</b> 0.66	<b>61.9</b> 2.44	0.750	<b>60.66</b> 2.388	<b>17.5</b> 0.69	<b>60.3</b> 2.38	0.625		
C (5 x 9)	<b>119.164-119.138</b> 4.6915-4.6905	<b>63.50</b> 2.500	<b>74.65</b> 2.939	<b>18.3</b> 0.72	<b>76.2</b> 3.00	0.875	<b>74.65</b> 2.939	<b>18.3</b> 0.72	<b>76.2</b> 3.00	0.625		
D (5 1±x 10)	<b>131.864-131.838</b> 5.1915-5.1905	<b>63.50</b> 2.500	<b>89.08</b> 3.507	<b>18.3</b> 0.72	<b>88.9</b> 3.50	0.875	<b>82.73</b> 3.257	<b>24.6</b> 0.97	<b>76.2</b> 3.00	0.875		
E (6 x 11)	<b>144.564-144.538</b> 5.6915-5.6905	<b>69.85</b> 2.750	<b>99.36</b> 3.912	<b>19.8</b> 0.78	<b>98.4</b> 3.88	1.000	<b>91.41</b> 3.599	<b>27.7</b> 1.09	<b>82.6</b> 3.25	1.000		
F (6 1± x 12)	<b>157.264-157.238</b> 6.1915-6.1905	<b>76.20</b> 3.000	<b>109.65</b> 4.317	<b>21.3</b> 0.84	<b>108.0</b> 4.25	1.125	<b>100.13</b> 3.942	<b>31.0</b> 1.22	<b>88.9</b> 3.50	1.000		
G (7 x 12) G (7 x 14)	<b>177.902-177.876</b> 7.0040-7.0030	<b>88.90</b> 3.500	<b>122.56</b> 4.825	<b>26.9</b> 1.06	<b>117.5</b> 4.62	1.250	<b>114.63</b> 4.513	<b>35.1</b> 1.38	<b>101.6</b> 4.00	1.125		
GG (7)	<b>177.902-177.876</b> 7.0040-7.0030	<b>88.90</b> 3.500	<b>122.58</b> 4.826	<b>26.9</b> 1.06	<b>117.5</b> 4.62	1.250	<b>114.63</b> 4.513	<b>35.1</b> 1.38	<b>101.6</b> 4.00	1.125		
K (8)	<b>203.327-203.302</b> 8.00508.0040	<b>101.60</b> 4.000	-	-	-	-	<b>136.78</b> 5.385	<b>36.6</b> 1.44	<b>123.8</b> 4.88	1.125		

<sup>(1)</sup> Axle size for rotating cone applications

NOTE: For those applications where a limited quantity of bearings are to be mounted, the assembly tool shown above can be economically fabricated.

### SIMPLIFIED INSTALLATION OF AP BEARINGS FOR **INDUSTRIAL EQUIPMENT**

### Installation Methods

What does the operator of a machine do when the operator's machine, located in a remote area away from any sophisticated tools, needs a bearing replaced? Timken suggests using the following procedures for installing AP bearings when sophisticated tools are not available. These methods for installing AP bearings are valuable ways of saving time and money.

Unlike other tapered roller bearing installations where the individual components are installed separately, the complete AP bearing assembly should be installed at the same time.

#### **Hydraulic RAM Method**

One method of installation utilizes a pressure piston pump and ram in an arrangement as shown at right.

The 445 kilonewton (50 ton) capacity centerhole hydraulic ram is used for the Class D (5<sup>1</sup>±x10) bearing.

### **Threaded Rod and Nut Method**

One of the least expensive tooling arrangements for installing our AP bearing utilizes the tools shown in Fig. 27.

The push tube is counterbored to accommodate our T127 thrust bearing to eliminate much of the friction between the nut face and the push tube.

> **WARNING**: Failure to observe the following warnings could create a risk of serious bodily harm.

Always use suitable personal protective equipment, including safety glasses.



Fig. 27 Auxiliary equipment

Impact Wrench

### Tooling

Both installation methods used a 1 <sup>1</sup>± in.-7 UNC threaded rod (SAE 4340 steel, hardened 48-53 Rc) threaded into a bearing pilot. Both methods use a push tube, nut, and cap screws. An example of tooling is shown in Fig. 28.

Three cap screws are then used to bolt the bearing pilot to the end of the shaft.

Lubricant is applied to the shaft before pressing on the bearing.

Required installation clamping force for each size of AP bearing may be obtained from page 42.

### **Comparison of Methods**

If the user does not own a hydraulic pump and ram, the "threaded rod and nut" method may be be less expensive. However, the threaded rod and nut method requires slightly more time and effort to install the bearing.

Regardless of the method used for installing the bearing assembly, it should be made certain that all components are properly seated. A distinctive metallic ping occurs at the instant all the components are seated.

WARNING: Failure to observe the following warnings could create a risk of serious bodily harm.

Proper maintenance and handling practices are critical. Always follow installation instructions and maintain proper lubrication.



Fig. 28 Tooling used to push bearing onto shaft

### **Bearing Removal (Axle)**

The bearing assemblies may be removed with a press or with portable fixtures. A force of 356-534 kilonewtons (40 to 60 tons) is normally required to break the bearing fit.

When it is desirable to remove the bearing without removing a wheel or other adjacent backing part, a pulling shoe is used, similar to that shown in Fig. 29.

Make sure that the pulling shoe is of the correct size for the bearing to be removed. Proper contact with the backing ring and puller alignment are necessary for efficient bearing removal.

Position the pulling shoe behind the backing ring. The pulling shoe contact surface of the backing ring is very narrow. Therefore, it is necessary to hold the pulling shoe down in position behind the backing ring as shown below until the initial pressure has been applied to ensure proper contact with the backing ring. Extend the ram to remove the bearing from the axle.

If bearings are to be removed along with wheels, make sure that the wheel hub will contact the backing ring or seal wear ring if a backing ring is not used. If the axle has large wheel seats, a suitable shoe or blocks must be used to make contact between the wheel hub and backing ring.

When bearings are removed from the axle, a pilot sleeve or guide tube should be fastened to the end of the axle or to the press ram to keep the bearing parts together and protect them from damage. Do not drop the bearing when removing it from the pilot sleeve.

After the bearing assembly is removed from the pilot sleeve, a tube similar to the cardboard insert or a similar device should be inserted in the bore of the bearing assembly to hold the internal bearing parts in place. Particular attention should be given to keeping the seal wear ring in place in the enclosure seals.

When bearing assemblies are removed from the axles, the bearings should be disassembled, cleaned and inspected.



Fig. 29 Holding the pulling shoe down against the bearing face bearing puller

### **Lubrication of AP Bearings**

Timken AP bearings are furnished prelubricated approximately half full with greases approved by the Association of American Railroads (AAR) Specification M942-78.

To help prevent the ingress of contamination, it is advantageous for the customer to fill the AP bearing completely full of grease, particularly in low and moderate speed applications. The grease used to fill the bearing must be compatible with the factory fill grease. That is, any grease added to the factory grease must not result in grease softening and consequent leakage around the seals. A lithium 12 hydroxy stearate soap grease with added rust and oxidation inhibitors is suggested. The viscosity of the base oil should be in a range from 150-220 cSt at 40°C (60-100 SUS at 210°F). An NLGI No. 2 grease is preferred; however, if there is a problem of pumping an NLGI No. 2 grease in cold weather, an NLGI No. 1 grease can be used.

In industrial applications, factory fill greases are generally satisfactory up to  $93^{\circ}C$  (200°F) on a continuous basis and up to  $121^{\circ}C$ 

(250°F) on an intermittent operation basis. For higher temperature operating environments and grease temperatures up to 177°C (350°F), a high temperature grease should be used to fill the AP bearing, as well as for further relubrication. In these instances, products utilizing a urea, or complex, thickener should be used. The grease selected must also have rust and oxidation inhibitors and a minimum base oil viscosity of 150 cSt at 40°C (60 SUS at 210°F). Frequent relubrication may be required even with higher temperature capability greases.


#### WARNING: Failure to observe the following warnings could create a risk of serious bodily harm.

Proper maintenance and handling practices are critical. Always follow installation instructions and maintain proper lubrication.

	Normal Jaikiel Channe	Additional Greas	e Required to Fill	Total Additional Grease Required to
Class	Normal Initial Charge	Bearing	Axle End Cap	Total Additional Grease Required to Completely Fill Assembly <sup>(1)</sup>
	<b>g</b>	<b>g</b>	<b>g</b>	<b>g</b>
	oz.	0Z.	oz.	oz.
B (4 <sup>1</sup> ±x 8)	<b>227</b>	<b>221</b>	<b>91</b>	<b>312</b>
	8	7.8	3.2	11
C (5 x 9)	<b>340</b>	<b>403</b>	<b>96</b>	<b>499</b>
	12	14.2	3.4	17.6
D (5 <sup>1</sup> ± x 10)	<b>454</b>	<b>445</b>	<b>133</b>	<b>578</b>
	16	15.7	4.7	20.4
E (6 x 11)	<b>454</b>	<b>593</b>	<b>179</b>	<b>771</b>
	16	20.9	6.3	27.2
F (6 <sup>1</sup> ±x 12)	<b>680</b>	<b>958</b>	<b>181</b>	<b>1140</b>
	24	33.8	6.4	40.2
G (7 x 12)	<b>907</b>	<b>1035</b>	<b>207</b>	<b>1242</b>
G (7 x 14)	32	36.5	7.3	43.8
GG (7)	<b>907</b>	<b>1469</b>	<b>414</b>	<b>1882</b>
	32	51.8	14.6	66.4
K (8)	<b>765</b>	<b>765</b>	<b>227</b>	<b>992</b>
	27	27	8	35

**Grease Capacities of AP Bearings** 

 $^{(1)}$  This column sums additional grease required to fill the bearing and end cap.

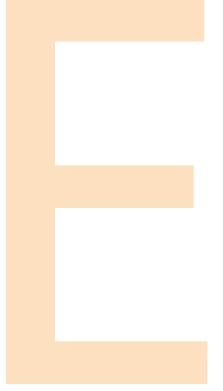

# Е но

# HOW TO ORDER

HOM TO ORDERS

AP™ Bearing Ordering Procedure .	
Basic AP Bearing Assembly Number	ers - Method 153
Supplemental and Special	
Assembly Numbers - Method 2	



### **AP BEARING ORDERING PROCEDURE**

Bearing assemblies may be ordered by two different methods.

### Method 1

Purchase one of the two basic bearing mounting arrangements shown on page 53, plus the required auxiliary parts shown on page 54.

### Method 2

Purchase an entire assembly or kit using the overall bearing assembly number as shown in the "Supplemental and Special Assembly Number" lists on pages 55 to 81. This overall assembly number includes all needed auxiliary parts.

Adapters are not part of the bearing assembly and should be ordered separately giving:

Quantity - bearing class - part number (page 55).

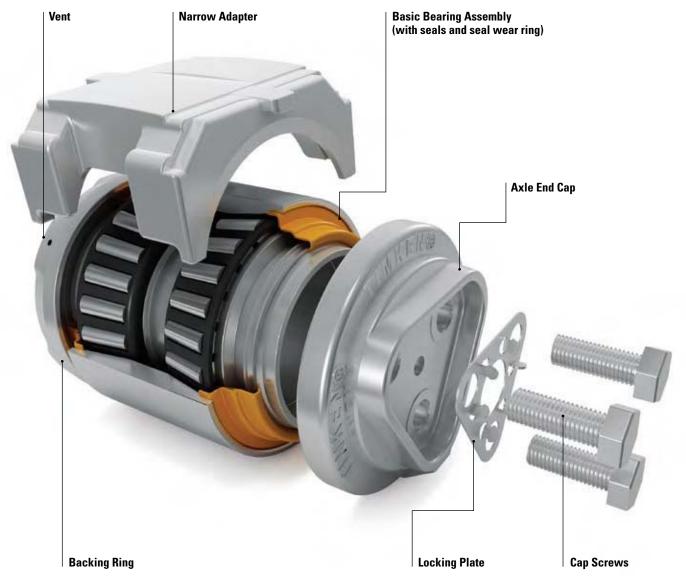


Fig. 30 3D illustration of AP bearing

# **Basic AP Bearing Ordering Procedure**

To facilitate order entry, identify the bearing assembly and required auxiliary parts by specifying the following details from the tables shown on pages 53 and 54. Also specify the quantity of each subassembly required to make up the assembly to suit your application. See page 13 for a detailed explanation of assembly numbers.

# An AP bearing assembly consists of:

- Basic AP assembly, does not include end cap (page 53)
- End cap one per bearing (page 54)
- Backing spacer one per bearing (page 54) with (choose one per bearing):
  - pipe plug
  - or lubricant fitting
  - or vent fitting

### **EXAMPLES**

# **1. A Class D assembly with shroud and pressed backing ring includes the following part numbers to order:**

- HM127446 90012 AP bearing assembly with shroud (page 53)
- K85521 90011 axle end cap assembly one per bearing (page 54)

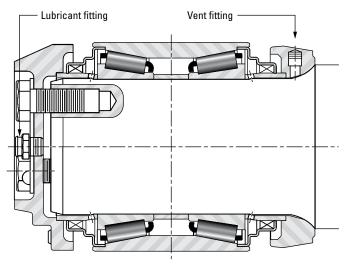


Fig. 31 Cross section view of AP bearing with shroud

# 2. A Class D assembly with auxiliary parts includes the following part numbers to order:

- HM127446 90048 basic AP bearing assembly (page 53)
- K85521 90011 axle end cap assembly one per bearing (page 54)
- K120178 backing spacer one per bearing (page 54)
- K83093 vent fitting one per bearing (page 54)


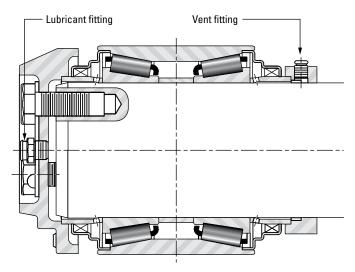


Fig. 32 Cross section view of AP bearing

### **Basic Bearing Assembly Numbers**

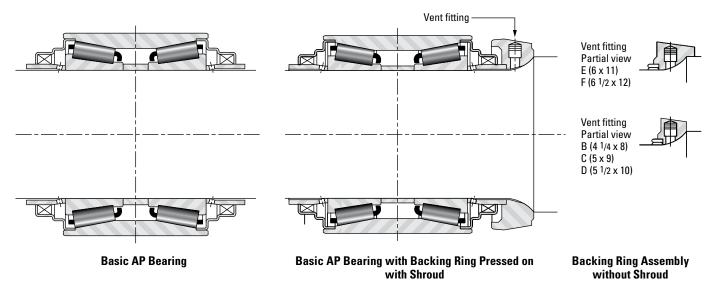

NOTE: Specify backing ring with or without shroud. Backing rings without shroud have reduced 0.D. to facilitate assembly in some housing designs. Backing rings with shroud provide added seal protection where required.

#### **AP Bearing Assembly Section**

Determine basic AP bearing assembly required and specify from the following table (include CONE NUMBER as shown with bearing Class):

Example: If a Class D bearing with a backing ring with shroud is required, specify: AP bearing Class D HM127446-90012.

Class - Cone Number	Davis AD Davies Assembly Number	Basic AP Bearing with Backing Ring Pressed on (Assembly Number)		
class - Cone Number	Basic AP Bearing Assembly Number	Backing Ring With Shroud	Backing Ring Without Shroud	
B (4 '⊠x 8) HM120848	90014	90012	90124	
C (5 x 9) HM124646	90056	90014	-	
D (5 ነ⊠x 10) HM127446	90048	90012	90318	
E (6 x 11) HM129848	90054	90012	90308	
F (6 ነ⊠x 12) HM133444	90076	90012	90424	
G (7 x 12) HM136948	-	90320	-	
G (7 x 14) HM136948	90226	90228	-	
GG (7) H337846	90248	90262	-	
K (8) M241547	90028	-	-	


NOTE: Cup 0.D. tolerances of 0.025 mm (.0010 in.), reduced width assemblies, assemblies with provision for relubrication through the center of the cup, and assemblies without seal parts are available in some bearing classes. Consult your Timken representative for availability.

### **METHOD 1**

### **Auxiliary Parts**

Auxiliary parts may be added to basic AP bearings, as required.

NOTE: Provide for relubrication on one side of bearing with vent at opposite side. If an auxiliary part is not used, these provisions should be made in parts adjacent to the bearing.

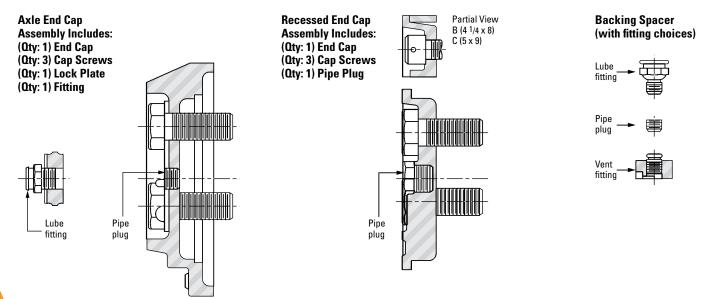

### **AP Bearing Auxiliary Parts Selection**

Class	Axle End Cap Assembly		Recessed End Cap Assembly		Backing Spacer	Lube Fitting Pipe Plug Vent Fitting	
01035	Part No	Assy No Assy No	Incl Pipe Plug Incl Lube Fitting	Part No	Assy No		Select One Per Backing Spacer
B (4 ¹⊠x 8)	K86877 K86877	90010 90012	Incl. Pipe Plug Incl. Lube Fitting	K399069	90010	K118891	K78880 K46462 K83093
C (5 x 9)	K86003 K86003	90010 90015	Incl. Pipe Plug Incl. Lube Fitting	K399070	90010	K120198	K78880 K46462 K83093
D (5 '⊠x 10)	K85521 K85521	90010 90011	Incl. Pipe Plug Incl. Lube Fitting	K399071	90010	K120178	K78880 K46462 K83093
E (6 x 11)	K85510 K85510	90010 90011	Incl. Pipe Plug Incl. Lube Fitting	K399072	90010	K120190	K78880 K46462 K83093
F (6 <sup>1</sup> ⊠x 12)	K85517 K85517	90010 90012	Incl. Pipe Plug Incl. Lube Fitting	K399073	90010	K120160	K78880 K46462 K83093
G (7 x 12)	K95199 K95199	90010 90011	Incl. Pipe Plug Incl. Lube Fitting	K399074	90010	K118866	K78880 K46462 K83093
G (7 x 14)	K412057 K412057	90010 90011	Incl. Pipe Plug Incl. Lube Fitting	K399074	90010	K118866	K78880 K46462 K83093
GG (7)	_	90010	Incl. Pipe Plug Incl. Lube Fitting	K399074	90010	K118866	K78880 K46462 K83093
K (8)		N.A.		K504075	90010	N.	Α.

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

#### **Typical AP Bearing Mounting Arrangements**


The following illustrations on pages 58 to 81 show typical combinations of basic AP bearings and auxiliary parts. See page 13 for a detailed explanation of assembly numbers. When these overall assemblies are used with the narrow adapter shown in Fig. 33, bearing mounting kits are formed.

When making up a mounting arrangement, a provision for relubrication should be made on one side of the bearing, with a vent on the opposite side. If an auxiliary part is not used, these provisions should be made in the parts adjacent the bearing.

Also, when designing an AP bearing into an application, the bearing must always be securely clamped through the cones. Depending on the mounting arrangement used, this may require additional parts, such as spacers, which are not furnished by Timken.

Class	Narrow Adapter
В	K86888
C	K85581
D	K85530
Ε	K85073
F	K85524
G (7 x 12)	K83138
G (7 x 14)	K83138
GG (7)	-
К	K522803


**Table 5 Adapter Part Numbers** 

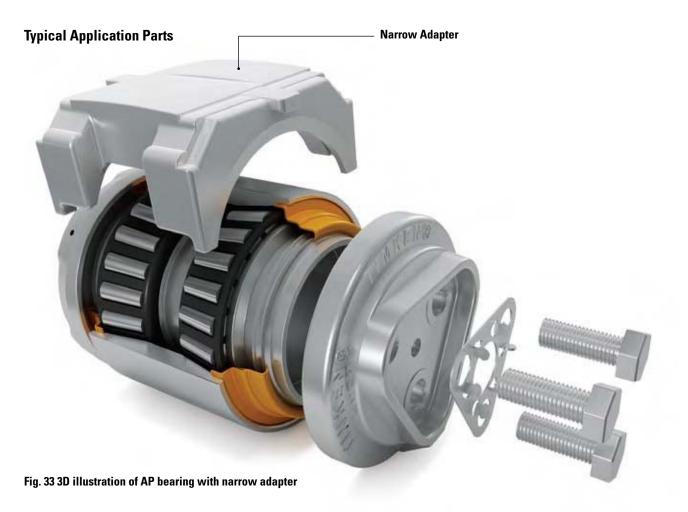


AP<sup>™</sup> BEARINGS FOR INDUSTRIAL APPLICATIONS **55** 

### **METHOD 2**

Mounting arrangements are shown in sequential order. See following pages for ordering information.

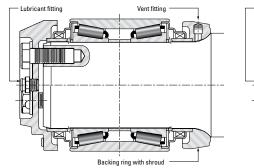

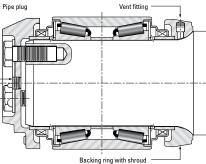

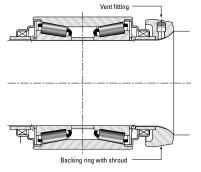
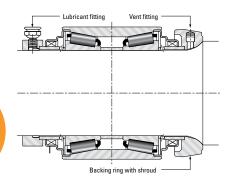
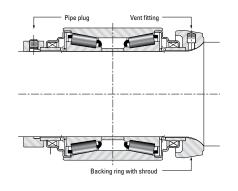


Fig. 34 Mounting Arrangment 1









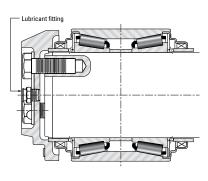








Fig. 39 Mounting Arrangment 3

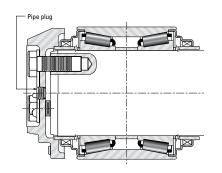


Fig. 40 Mounting Arrangment 3-A

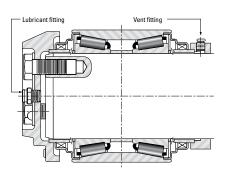
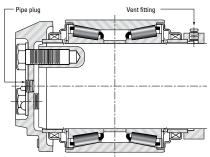


Fig. 41 Mounting Arrangment 3-B





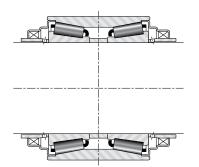


Fig. 43 Mounting Arrangment 4

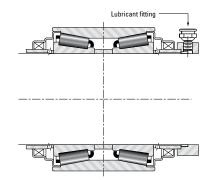


Fig. 44 Mounting Arrangment 5

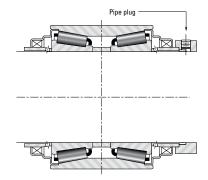


Fig. 45 Mounting Arrangment 5-A


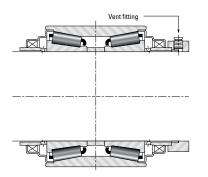


Fig. 46 Mounting Arrangment 5-B

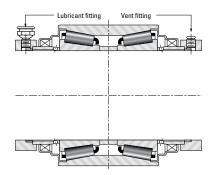

#### Fig. 47 Mounting Arrangment 5-C


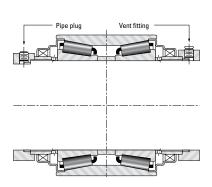


Fig. 48 Mounting Arrangment 5-D

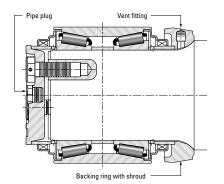

#### Fig. 49 Mounting Arrangment 6


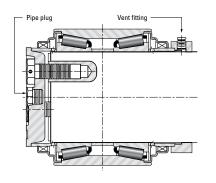


Fig. 50 Mounting Arrangment 6-A



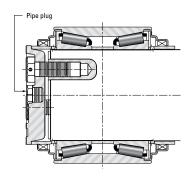


Ε

### METHOD 2

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 1** 

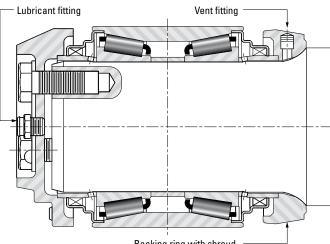

Backing ring with shroud


Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 - 90023	HM120848	Axle end cap K86877-90012 Backing ring K86874-90010
C	HM124646 - 90047	HM124646	Axle end cap K86003-90015 Backing ring K85588-90010
D	HM127446 - 90011	HM127446 - 90211	Axle end cap K85521-90011 Backing ring K85525-90010
E	HM129848 - 90011	HM129848 - 90125	Axle end cap K85510-90011 Backing ring K85095-90010
F	HM133444 - 90015	HM133444 - 90211	Axle end cap K85517-90012 Backing ring K85516-90010
G (7 x 12)	HM136948 - 90359	HM136948 - 90355	Axle end cap K95199-90011 Backing ring K147766-90010
G (7 x 14)	HM136948 - 90251	HM136948	Axle end cap K412057-90011 Backing ring K95200-90010
GG (7)	H337846	H337846	Axle end cap K95199 Backing ring K147766-90010
К	M241547	M241547	Axle end cap Backing ring

(1) Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 1A** 

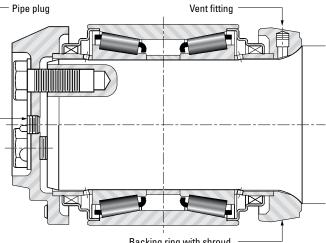

Backing ring with shroud

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90011	HM120848 - 90059	Axle end cap K86877-90010 Backing ring K86874-90010
С	HM124646 -90013	HM124646	Axle end cap K86003-90010 Backing ring K85588-90010
D	HM127446 -90013	HM127446	Axle end cap K85521-90010 Backing ring K85525-90010
E	HM129848 -90013	HM129848	Axle end cap K85510-90010 Backing ring K85095-90010
F	HM133444 -90011	HM133444	Axle end cap K85517-90010 Backing ring K85516-90010
G (7 x 12)	HM136948 -90327	HM136948	Axle end cap K95199-90010 Backing ring K147766-90010
G (7 x 14)	HM136948 -90243	HM136948	Axle end cap K412057-90010 Backing ring K95200-90010
GG (7)	H337846	H337846	Axle end cap K95199 Backing ring K147766-90010
К	M241547	M241547	Axle end cap Backing ring


(1) Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

### METHOD 2

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 2** 

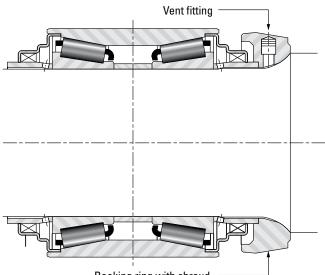

Backing ring with shroud

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90012	HM120848 - 90060	Backing ring K86874-90010
C	HM124646 -90014	HM124646 - 90180	Backing ring K85588-90010
D	HM127446 -90012	HM127446 - 90098	Backing ring K85525-90010
E	HM129848 -90012	HM129848 - 90114	Backing ring K85095-90010
F	HM133444 -90012	HM133444 - 90212	Backing ring K85516-90010
G (7 x 12)	HM136948 -90320	HM136948 - 90334	Backing ring K147766-90010
G (7 x 14)	HM136948 -90228	HM136948 - 90254	Backing ring K95200-90010
GG (7)	H337846 -90262	H337846 - 90270	Backing ring K147766-90010
к	M241547	M241547	Backing ring


(1) Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

<sup>(2)</sup> For reference only.

# **METHOD 2**

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 2A** 

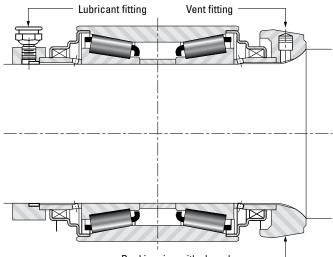

Backing ring with shroud

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90080	HM120848	Backing spacer K118891 Lube fitting K78880 Backing ring K86874-90010
С	HM124646 -90086	HM124646 - 90098	Backing spacer K120198 Lube fitting K78880 Backing ring K85588-90010
D	HM127446 -90120	HM127446	Backing spacer K120178 Lube fitting K78880 Backing ring K85525-90010
E	HM129848 -90142	HM129848 - 90212	Backing spacer K120190 Lube fitting K78880 Backing ring K85095-90010
F	HM133444 -90124	HM133444	Backing spacer K120160 Lube fitting K78880 Backing ring K85516-90010
G (7 x 12)	HM136948 -90124	HM136948 - 90354	Backing spacer K118866 Lube fitting K78880 Backing ring K147766-90010
G (7 x 14)	HM136948 -90170	-	Backing spacer K118866 Lube fitting K78880 Backing ring K95200-90010
GG (7)	H337846	H337846	Backing spacer K118866 Lube fitting K78880 Backing ring K147766-90010
К	M241547	M241547	Backing spacer Lube fitting Backing ring


(1) Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

### METHOD 2

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 2B** 

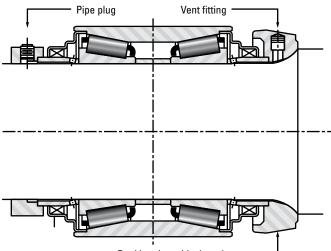

Backing ring with shroud


Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90086	HM120848	Backing spacer K118891 Pipe plug K46462 Backing ring K86874-90010
С	HM124646 -90078	HM124646	Backing spacer K120198 Pipe plug K46462 Backing ring K85588-90010
D	HM127446 -90118	HM127446	Backing spacer K120178 Pipe plug K46462 Backing ring K85525-90010
E	HM129848 -90126	HM129848	Backing spacer K120190 Pipe plug K46462 Backing ring K85095-90010
F	HM133444 -90122	HM133444	Backing spacer K120160 Pipe plug K46462 Backing ring K85516-90010
G (7 x 12)	HM136948 -90350	HM136948	Backing spacer K118866 Pipe plug K46462 Backing ring K147766-90010
G (7 x 14)	HM136948 -90266	HM136948	Backing spacer K118866 Pipe plug K46462 Backing ring K95200-90010
GG (7)	H337846	H337846	Backing spacer K118866 Pipe plug K46462 Backing ring K147766-90010
К	M241547	M241547	Backing spacer Pipe plug Backing ring

(1) Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 3** 

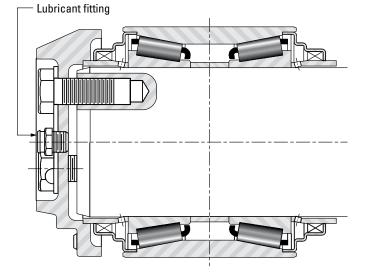

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90091	HM120848 - 90097	Axle end cap K86877-90012
С	HM124646 -90085	HM124646	Axle end cap K86003-90015
D	HM127446 -90093	HM127446	Axle end cap K85521-90011
E	HM129848 -90169	HM129848 90105	Axle end cap K85510-90011
F	HM133444 -90107	HM133444 90175	Axle end cap K85517-90012
G (7 x 12)	HM136948	HM136948	Axle end cap
G (7 x 14)	HM136948 -90283	HM136948	Axle end cap K412057-90011
GG (7)	H337846	H337846	Axle end cap K9519
К	M241547	M241547	Axle end cap


(1) Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

# METHOD 2

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 3A** 

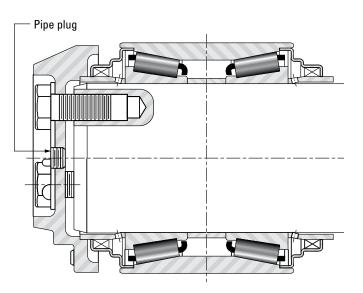


Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90121	HM120848 - 90099	Axle end cap K86877-90010
С	HM124646 -90083	HM124646	Axle end cap K86003-90010
D	HM127446	HM127446 - 90107	Axle end cap K85521-90010
E	HM129848	HM129848	Axle end cap K85510-90010
F	HM133444	HM133444 - 90141	Axle end cap K85517-90010
G (7 x 12)	HM136948	HM136948	Axle end cap
G (7 x 14)	HM136948	HM136948 - 90263	Axle end cap K412057-90010
GG (7)	H337846	H337846	Axle end cap K95199
К	M241547	M241547	Axle end cap

<sup>(1)</sup> Code 350 provides a cup O.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 3B** 

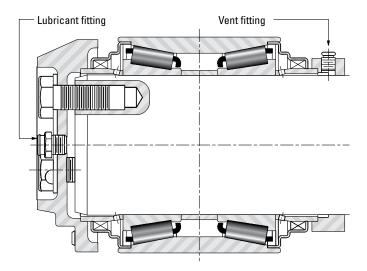

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90115	HM120848	Axle end cap K86877-90012 Backing spacer K118891 Vent fitting K83093
С	HM124646 -90089	HM124646 - 90185	Axle end cap K86003-90015 Backing spacer K120198 Vent fitting K83093
D	HM127446 -90167	HM127446 - 90189	Axle end cap K85521-90011 Backing spacer K120178 Vent fitting K83093
E	HM129848 -90155	HM129848	Axle end cap K85510-90011 Backing spacer K120190 Vent fitting K83093
F	HM133444 -90221	HM133444	Axle end cap K85517-90012 Backing spacer K120160 Vent fitting K83093
G (7 x 12)	HM136948	HM136948	Axle end cap Backing spacer Vent fitting
G (7 x 14)	HM136948 -90291	HM136948	Axle end cap K412057-90011 Backing spacer K118866 Vent fitting K83093
GG (7)	H337846	H337846	Axle end cap K95199 Backing spacer K118866 Vent fitting K83093
К	M241547	M241547	Axle end cap Backing spacer Vent fitting


(1) Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

# METHOD 2

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 3C** 

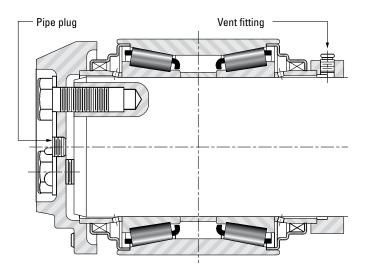


Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90083	HM120848 - 90161	Axle end cap K86877-90010 Backing spacer K118891 Vent fitting K83093
С	HM124646	HM124646	Axle end cap K86003-90010 Backing spacer K120198 Vent fitting K83093
D	HM127446	HM127446	Axle end cap K85521-90010 Backing spacer K120178 Vent fitting K83093
E	HM129848	HM129848	Axle end cap K85510-90010 Backing spacer K120190 Vent fitting K83093
F	HM133444	HM133444	Axle end cap K85517-90010 Backing spacer K120160 Vent fitting K83093
G (7 x 12)	HM136948	HM136948	Axle end cap Backing spacer Vent fitting
G (7 x 14)	HM136948	HM136948	Axle end cap K412057-90010 Backing spacer K118866 Vent fitting K83093
GG (7)	H337846	H337846	Axle end cap K95199 Backing spacer K118866 Vent fitting K83093
к	M241547	M241547	Axle end cap Backing spacer Vent fitting

<sup>(1)</sup> Code 350 provides a cup O.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

<sup>(2)</sup> For reference only.

# SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 4** 

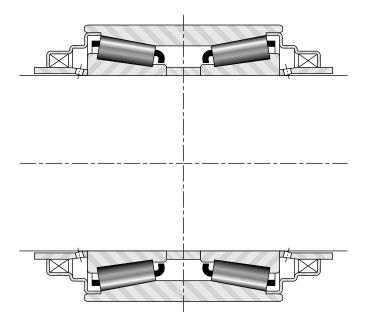


Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies
В	HM120848 -90014	HM120848 - 90078	-
С	HM124646 -90056	HM124646 - 90068	-
D	HM127446 -90048	HM127446 - 90106	-
E	HM129848 -90054	HM129848 - 90104	-
F	HM133444 -90076	HM133444 - 90128	-
G (7 x 12)	HM136948	HM136948	-
G (7 x 14)	HM136948 -90226	HM136948 - 90256	-
GG (7)	H337846 -90248	H337846 - 90246	-
К	M241547 -90028	M241547 - 90050	_

<sup>(1)</sup> Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

### METHOD 2

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 5** 

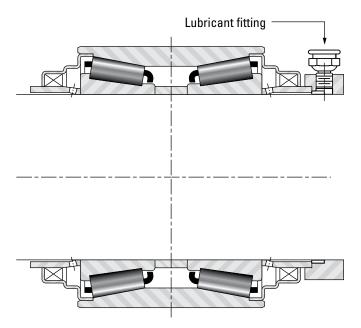


Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90074	HM120848	Backing spacer K118891 Lube fitting K78880
С	HM124646 -90108	HM124646	Backing spacer K120198 Lube fitting K78880
D	HM127446 -90168	HM127446	Backing spacer K120178 Lube fitting K78880
E	HM129848 -90154	HM129848	Backing spacer K120190 Lube fitting K78880
F	HM133444 -90184	HM133444	Backing spacer K120160 Lube fitting K78880
G (7 x 12)	HM136948	HM136948	Backing spacer Lube fitting
G (7 x 14)	HM136948 -90284	HM136948	Backing spacer K118866 Lube fitting K78880
GG (7)	H337846	H337846	Backing spacer K118866 Lube fitting K78880
К	M241547	M241547	Backing spacer Lube fitting

<sup>(1)</sup> Code 350 provides a cup O.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 5A** 

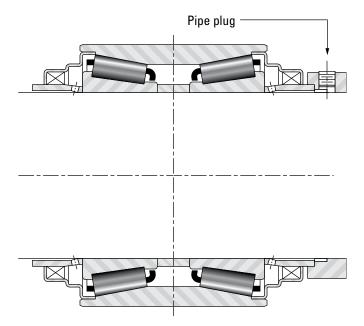

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90088	HM120848	Backing spacer K118891 Pipe plug K46462
С	HM124646 -90084	HM124646	Backing spacer K120198 Pipe plug K46462
D	HM127446 -90114	HM127446	Backing spacer K120178 Pipe plug K46462
E	HM129848 -90120	HM129848	Backing spacer K120190 Pipe plug K46462
F	HM133444 -90126	HM133444	Backing spacer K120160 Pipe plug K46462
G (7 x 12)	HM136948	HM136948	Backing spacer Pipe plug
G (7 x 14)	HM136948 -90238	HM136948	Backing spacer K118866 Pipe plug K46462
GG (7)	H337846	H337846	Backing spacer K118866 Pipe plug K46462
К	M241547	M241547	Backing spacer Pipe plug


<sup>(1)</sup> Code 350 provides a cup O.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

## METHOD 2

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 5B** 

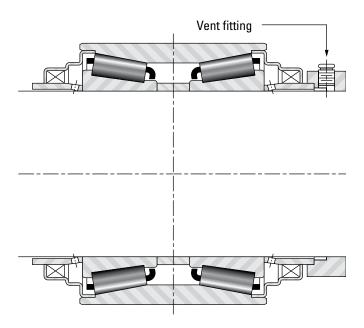

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90082	HM120848 - 90160	Backing spacer K118891 Vent fitting K83093
С	HM124646 -90092	HM124646 - 90184	Backing spacer K120198 Vent fitting K83093
D	HM127446 -90138	HM127446 - 90188	Backing spacer K120178 Vent fitting K83093
E	HM129848 -90156	HM129848	Backing spacer K120190 Vent fitting K83093
F	HM133444 -90220	HM133444	Backing spacer K120160 Vent fitting K83093
G (7 x 12)	HM136948	HM136948	Backing spacer Vent fitting
G (7 x 14)	HM136948 -90292	HM136948	Backing spacer K118866 Vent fitting K83093
GG (7)	H337846	H337846	Backing spacer K118866 Vent fitting K83093
К	M241547	M241547	Backing spacer Vent fitting


<sup>(1)</sup> Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

# **METHOD 2**

### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 5C** 

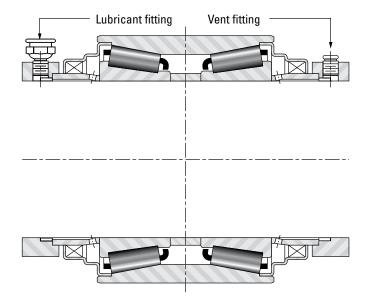

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90106	HM120848 - 90138	Backing spacer K118891 <sup>(2)</sup> Lube fitting K78880 Vent fitting K83093
С	HM124646 -90090	HM124646	Backing spacer K120198 <sup>(2)</sup> Lube fitting K78880 Vent fitting K83093
D	HM127446 -90170	HM127446	Backing spacer K120178 <sup>(2)</sup> Lube fitting K78880 Vent fitting K83093
E	HM129848 -90248	HM129848	Backing spacer K120190 <sup>(2)</sup> Lube fitting K78880 Vent fitting K83093
F	HM133444	HM133444 - 90236	Backing spacer K120160 <sup>(2)</sup> Lube fitting K78880 Vent fitting K83093
G (7 x 12)	HM136948	HM136948	Backing spacer Lube fitting Vent fitting
G (7 x 14)	HM136948	HM136948	Backing spacer K118866 <sup>(2)</sup> Lube fitting K78880 Vent fitting K83093
GG (7)	H337846	H337846	Backing spacer K118866 <sup>(2)</sup> Lube fitting K78880 Vent fitting K83093
К	M241547	M241547	Backing spacer Lube fitting Vent fitting


<sup>(1)</sup> Code 350 provides a cup O.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

### METHOD 2

# SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 5D** 

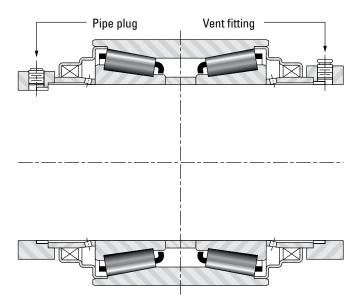


Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90084	HM120848 - 90098	Backing spacer K118891 <sup>(2)</sup> Pipe plug K46462 Vent fitting K83093
C	HM124646	HM124646	Backing spacer K120198 <sup>(2)</sup> Pipe plug K46462 Vent fitting K83093
D	HM127446 -90166	HM127446	Backing spacer K120178 <sup>(2)</sup> Pipe plug K46462 Vent fitting K83093
E	HM129848 -90122	HM129848	Backing spacer K120190 <sup>(2)</sup> Pipe plug K46462 Vent fitting K83093
F	HM133444 -90270	HM133444	Backing spacer K120160 <sup>(2)</sup> Pipe plug K46462 Vent fitting K83093
G (7 x 12)	HM136948	HM136948	Backing spacer Pipe plug Vent fitting
G (7 x 14)	HM136948	HM136948	Backing spacer K118866 <sup>(2)</sup> Pipe plug K46462 Vent fitting K83093
GG (7)	H337846	H337846	Backing spacer K118866 <sup>(2)</sup> Pipe plug K46462 Vent fitting K83093
К	M241547	M241547	Backing spacer Pipe plug Vent fitting

<sup>(1)</sup> Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

#### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 6** 

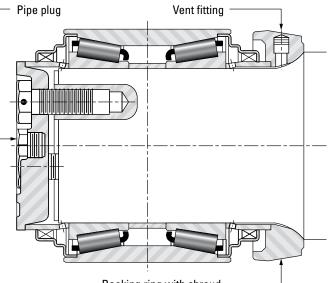

Backing ring with shroud

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90065	HM120848 -90105	Recessed end cap K399069-90010 Backing ring K86874-90010
С	HM124646 -90065	HM124646	Recessed end cap K399070-90010 Backing ring K85588-90010
D	HM127446 -90101	HM127446 -90099	Recessed end cap K399071-90010 Backing ring K85525-90010
E	HM129848 -90109	HM129848 -90199	Recessed end cap K399072-90010 Backing ring K85095-90010
F	HM133444 -90117	HM133444	Recessed end cap K399073-90010 Backing ring K85516-90010
G (7 x 12)	HM136948 -90331	HM136948	Recessed end cap K399074-90010 Backing ring K147766-90010
G (7 x 14)	HM136948 -90265	HM136948 -90253	Recessed end cap K399074-90010 Backing ring K95200-90010
GG (7)	H337846	H337846	Recessed end cap K399074-90010 Backing ring K147766-90010
К	M241547	M241547	Recessed end cap Backing ring

<sup>(1)</sup> Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.


NOTE: Auxiliary parts are supplied with the overall assembly number – see pages 76 to 79 for listing of component parts.

## HOW TO ORDER

#### **METHOD 2**

#### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 6A** 

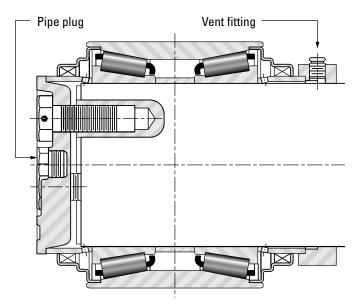

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90081	HM120848	Recessed end cap K399069-90010 Backing spacer K118891 Vent fitting K83093
C	HM124646	HM124646	Recessed end cap K399070-90010 Backing spacer K120198 Vent fitting K83093
D	HM127446 -90157	HM127446	Recessed end cap K399071-90010 Backing spacer K120178 Vent fitting K83093
E	HM129848 -90171	HM129848	Recessed end cap K399072-90010 Backing spacer K120190 Vent fitting K83093
F	HM133444	HM133444	Recessed end cap K399073-90010 Backing spacer K120160 Vent fitting K83093
G (7 x 12)	HM136948	HM136948	Recessed end cap Backing spacer Vent fitting
G (7 x 14)	HM136948 -90295	HM136948	Recessed end cap K399074-90010 Backing spacer K118866 Vent fitting K83093
GG (7)	H337846	H337846	Recessed end cap K399074-90010 Backing spacer K118866 Vent fitting K83093
К	M241547	M241547	Recessed end cap Backing spacer Vent fitting


<sup>(1)</sup> Code 350 provides a cup 0.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.

NOTE: Auxiliary parts are supplied with the overall assembly number - see pages 76 to 79 for listing of component parts.

#### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

**Bearing Mounting Arrangement 6B** 

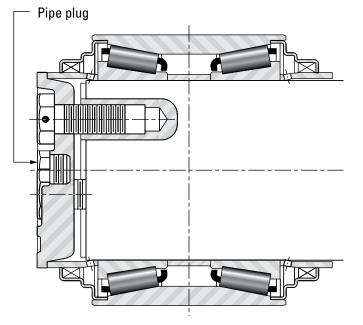

Class	Overall Assembly Standard	Overall Assembly Code 350 <sup>(1)</sup>	Auxiliary Parts Sub Assemblies <sup>(2)</sup>
В	HM120848 -90037	HM120848 -90077	Recessed end cap K399069-90010
С	HM124646 -90057	HM124646 -90069	Recessed end cap K399070-90010
D	HM127446 -90083	HM127446 -90181	Recessed end cap K399071-90010
E	HM129848 -90101	HM129848	Recessed end cap K399072-90010
F	HM133444 -90087	HM133444 -90169	Recessed end cap K399073-90010
G (7 x 12)	HM136948	HM136948	Recessed end cap
G (7 x 14)	HM136948 -90241	HM136948	Recessed end cap K399074-90010
GG (7)	H337846 -90247	H337846	Recessed end cap K399074-90010
К	M241547 -90029	M241547	Recessed end cap K504075-90010

<sup>(1)</sup> Code 350 provides a cup O.D. tolerance of +.003 +.004 in. and is used in applications requiring a press fit for the cup.

(2) For reference only.


NOTE: Auxiliary parts are supplied with the overall assembly number – see pages 76 to 79 for listing of component parts.

## HOW TO ORDER ······

**METHOD 2** 

#### SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

 
**Axle End Cap Assemblies** 



Class	Assembly No	Fad Can Dart Na	Cap Screw (Qty: 3)		Lock Plate	Pipe Plug		Lube Fitting
		End Cap Part No	Size	Part No	LUCK Fiale	Size	Part No	
В	K86877-90010 K86877-90012	K86877 K86877	³⊠in. ³⊠in.	K53399 K53399	K84326 K84326	%⊠in.	K86891	K399065
С	K86003-90010 K86003-90015	K86003 K86003	7⊠in. 7⊠in.	K44434 K44434	K84325 K84325	%⊠in.	K86891	K399065
D	K85521-90010 K85521-90011	K85521 K85521	7⊠in. 7⊠in.	K44434 K44434	K80511 K80511	¹⊠in.	K75801	K49022
E	K85510-90010 K85510-90011	K85510 K85510	1 in. 1 in.	K84354 K84354	K80596 K80596	¹⊠in.	K75801	K49022
F	K85517-90010 K85517-90012	K85517 K85517	1 ¹⊠in. 1 ¹⊠in.	K84351 K84351	K84324 K84324	¹⊠in.	K75801	K49022
G (7 x 12)	K95199-90010 K95199-90011	K95199 K95199	1 ¹⊠in. 1 ¹⊠in.	K84398 K84398	K84701 K84701	™in.	K75801	K49022
G (7 x 14)	K412057-90010 K412057-90011	K412057 K412057	1 ¹⊠in. 1 ¹⊠in.	K84398 K84398	K84701 K84701	™⊠in.	K75801	K49022
GG (7)	K95199-90010 K95199-90011 K95199-90010 K95199	K95199 K95199 K462064 K462064	1 '⊠in. 1 '⊠in. 1 '⊠in. 1 '⊠in.	K84398 K84398 K462063 K462063	K84701 K84701 K84701 K84701	'⊠in. '⊠in.	K75801 K75801	K49022 K49022
К	_	_	_		_	_		-

## SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

 **Recessed End Cap Assemblies** 




Class		End Cap Part No	Cap Scre	w (Qty: 3)	Pipe Plug	
Class	Assembly No		Size	Part No	Size	Part No
В	K399069-90010	K399069	≌ain.	K344077	'⊠in.	K75801
С	K399070-90010	K399070	™in.	K344077	'⊠in.	K75801
D	K399071-90010	K399071	⁄⊠in.	K33003	'⊠in.	K75801
E	K399072-90010	K399072	1 in.	K74600	'⊠in.	K75801
F	K399073-90010	K399073	1 in.	K74600	'⊠in.	K75801
G (7 x 12)	K399074-90010	K399074	1 '⊠in.	K74588	'⊠in.	K75801
G (7 x 14)	K399074-90010	K399074	1 '⊠in.	K74588	'⊠in.	K75801
GG (7)	K399074-90010	K399074	1 '⊠in.	K74588	¹⊠in.	K75801
К	K504075-90010	K504075	1 '⊠in.	K74588	'⊠in.	K75801

## HOW TO ORDER

**METHOD 2** 

## SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

 
**Backing Ring with Shroud** 



Class	Assembly No	Backing Ring Part No	Vent Fitting Part No
В	K86874-90010	K86874	K89716
C	K85588-90010	K85588	K89716
D	K85525-90010	K85525	K89716
E	K85095-90010	K850095	K89716
F	K85516-90010	K85516	K89716
G (7 x 12)	K147766-90010	K147766	K89716
G (7 x 14)	K95200-90010	K95200	K89716
GG (7)	K147766-90010	K147766	K89716
К	-	_	-

## SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

 **Backing Spacer** 



	Backing Spacer Part No	With One Of The Following					
Class		Vent Fitting		Pipe Plug		Lube Fitting	
		Size	Part No	Size	Part No	Size	Part No
В	K118891	¹⊠in.	K83093	י⊠in.	K46462	¹⊠in.	K78880
C	K120198	¹⊠in.	K83093	י⊠in.	K46462	¹⊠in.	K78880
D	K120178	¹⊠in.	K83093	י⊠in.	K46462	¹⊠in.	K78880
E	K120190	¹⊠in.	K83093	<sup>ı</sup> ⊠in.	K46462	¹⊠in.	K78880
F	K120160	¹⊠in.	K83093	<sup>ı</sup> ⊠in.	K46462	¹⊠in.	K78880
G (7 x 12)	K118866	¹⊠in.	K83093	<sup>ı</sup> ⊠in.	K46462	¹⊠in.	K78880
G (7 x 14)	K118866	¹⊠in.	K83093	<sup>ı</sup> ⊠in.	K46462	¹⊠in.	K78880
GG (7)	K118866	¹⊠in.	K83093	י⊠in.	K46462	¹⊠in.	K78880
К	-	-	-	_	-	-	-

## HOW TO ORDER

#### METHOD 2

## SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

# Assemblies with Special Cup for Relubrication to Center of the Bearing

Class	Assembly No	Mounting Arrangement	Cup Number	Remarks
В	HM120848-90090 HM120848-90136 HM120848-90150 HM120848-90154 HM120848-90155 HM120848-90156 HM120848-90158	Style 4 Style 4 Style 5B Style 4 Style 6B Style 5B Style 2	HM120817D HM120817D HM120817D HM120817YD HM120817YD HM120817YD HM120817YD HM120817YD	Oil hole and groove on cup -special clearance - E29536 Oil hole and groove on cup - E31318 Oil hole and groove on cup - no dwg 2 '짧in. NPT holes in cup - E32239 2 '짧in. NPT holes in cup - E34745 2 '짧in. NPT holes in cup - E34746 2 'ໝin. NPT holes in cup - E34750
C	HM124646-90158	Style 4	HM124618YD	2 '⊠in. NPT holes in cup - E33239
D	HM127446-90153 HM127446-90152 HM127446-90270 HM127446-9072 HM127446-90216	Style 1A Style 2 Style 2 Style 4 Style 5B	HM127415D HM127415D HM127415D HM127415D HM127415D HM127415D	Oil hole and groove on cup - E30994 Oil hole and groove on cup - E30994 Oil hole and groove on cup - special clearance - no dwg Oil hole and groove on cup - E31318 Oil hole and groove on cup - E33227
E	HM129848-90174 HM129848-90210	Style 2 Style 5B	HM129814D HM129814D	Oil hole and groove on cup - E31319 Oil hole and groove on cup - no dwg
F	HM133444-90177 HM133444-90176 HM133444-90248	Style 1A Style 2 Style 4	HM133416D HM133416D HM133415YD	Oil hole and groove on cup - E30994 Oil hole and groove on cup - E30994 2 "ଭin. NPT holes in cup - E33239
G	HM136948-90345 HM136948-90344 HM136948-90304 HM136948-90296	Style 1A (7 X 12) Style 2 (7 X 12) Style 2 (7 X 14) Style 4 (7 X 14)	HM136916D HM136916D HM136916D HM136916D HM136916D	Oil hole and groove on cup - E30994 Oil hole and groove on cup - E30994 Oil hole and groove on cup - E31319 Oil hole and groove on cup - E31318
к	M241547-90070	Style 4	M241513D	Oil hole and groove on cup - E37462

## SUPPLEMENTAL AND SPECIAL ASSEMBLY NUMBERS

#### **Assemblies with Non-Standard - Reduced Width**

Class	Assembly No	Mounting	Cup Number	Remarks
	HM124646-90132	Style 2	HM124616XD	Cone spacer HM124646XC Backing ring K85588-90010
C	HM124646-90116	Style 4	HM124616XD	Cone spacer HM124646XC
U	HM124646-90140	Style 4	HM124616XD	Cone spacer HM124646XC Code 350 tolerances
	HM124646-90133	Style 6	HM124616XD	Cone spacer HM124646XC Recessed end cap K399070-90010 Backing ring K85588-90010
D	HM127446		HM127417XD	Cone spacer HM127446XB
	HM129848-90218	Style 2	HM129813XD	Cone spacer HM129848XB Backing ring K85095-90010
E	HM129848-90176	Style 4	HM129813XD	Cone spacer HM129848XB
E	HM129848-90219	Style 6	HM129813XD	Cone spacer HM129848XB Recessed end cap K399072-90010 Backing ring K85095-90010
	HM129848-90177	Style 6B	HM129813XD	Cone spacer HM129848XB Recessed end cap K399072-90010
F	HM133444-90190	Style 2	HM133413XD	Cone spacer HM133444XE Backing ring K85516-90010 Code 350 tolerances

AP<sup>™</sup> BEARINGS FOR INDUSTRIAL APPLICATIONS 83



Bearings • Steel • Precision Components • Lubrication • Seals • Remanufacture and Repair • Industrial Services

www.timken.com

Timken® is the registered trademark of The Timken Company.

© 2008 Timken Printed in U.S.A. 15M 11-08-29 Order No. 1013